


WINGBURG

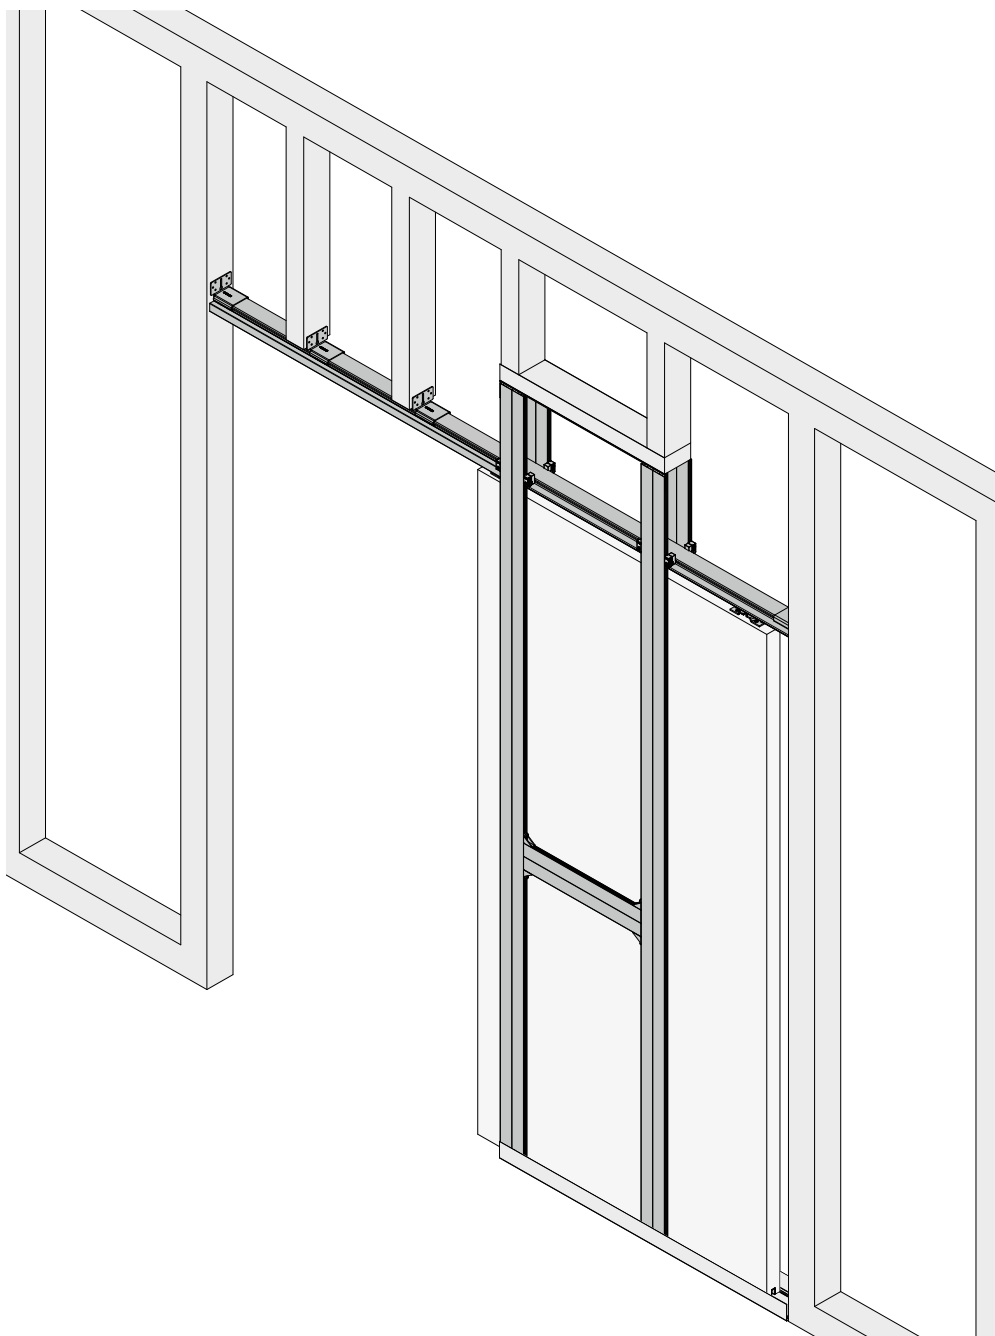

MOUNTING INSTRUCTION

BUILT-IN ELEMENT FOR SLIDING DOOR SYSTEM
POCKET SET PRO

CONTENT

Page index

Mounting preparation	S.3
Scope of delivery.....	S.4
Dimensions	S.6
Mounting.....	S.8
Jamb kit installation	S.13
Wood door leaf mounting	S.15
Glass door leaf mounting	S.18
Door stop position setting.....	S.21

Product description

The Pocket-Set is an installation element for sliding doors in 2x4 stud frames.





Suitable for Wood or glass doors up to (80 kg) door leaf weight with door dimensions from (610 x 1985 mm) to max. (985 x 2110 mm)

Safety notes

Before assembly, please read the assembly instructions carefully. In case of difficulties in understanding, contact the customer service or your supplier. In order to assemble the purchased product properly, please use the tools indicated on the following page. Since some sheets may have sharp edges, also be sure to protect your hands and work surfaces


from cuts or scratches. During assembly, always ensure that you work ergonomically and only assemble alone if you can rule out any risk to your health or other persons. All components were checked for integrity before delivery. No liability is accepted for damage caused by improper assembly or transport.

Required tools

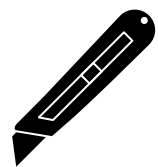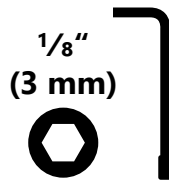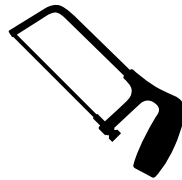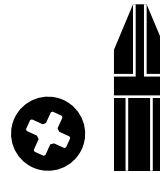


SCOPE OF DELIVERY

Track incl. wheel set and stoppers

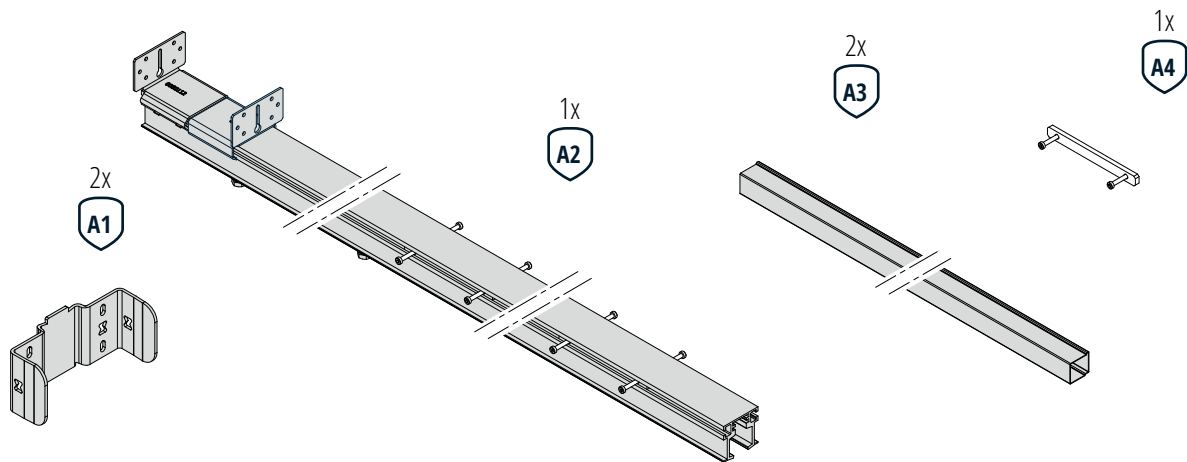


Built-in element

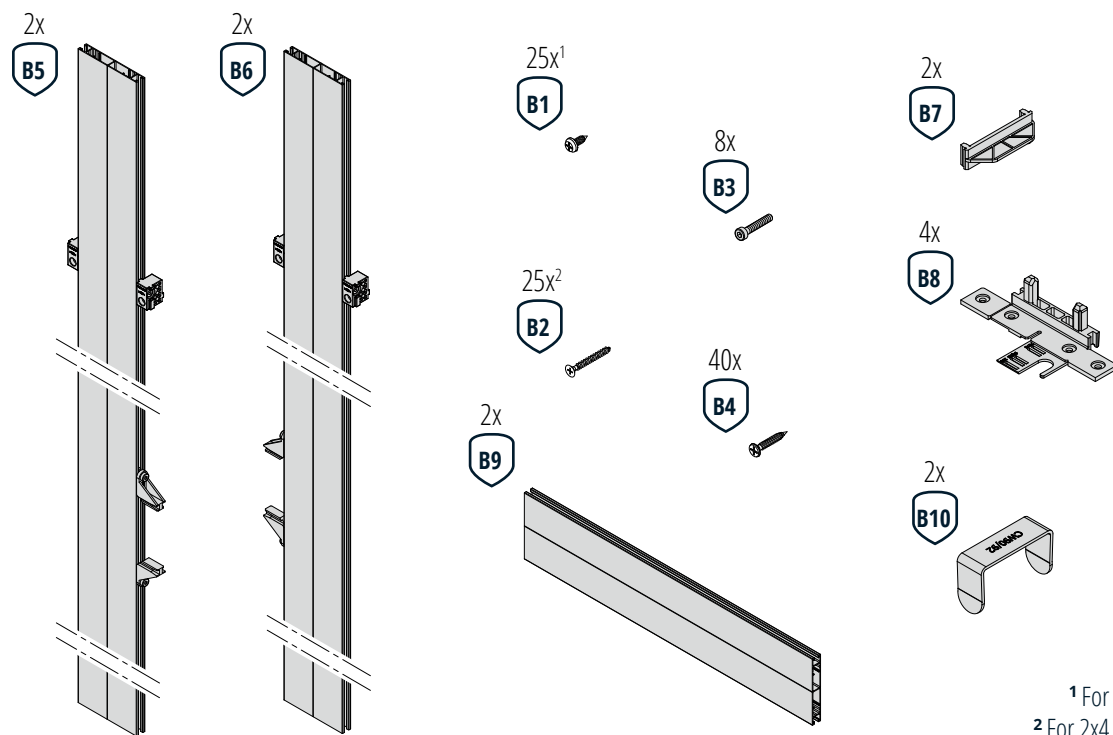


¹ For metal studs
² For 2x4 wood studs

Door leaf set


Wood

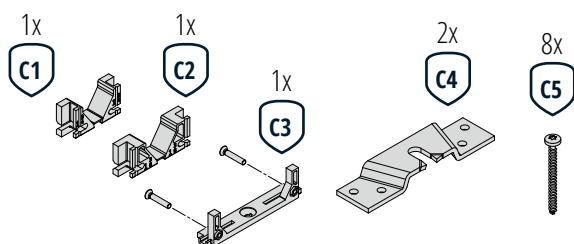

Glass

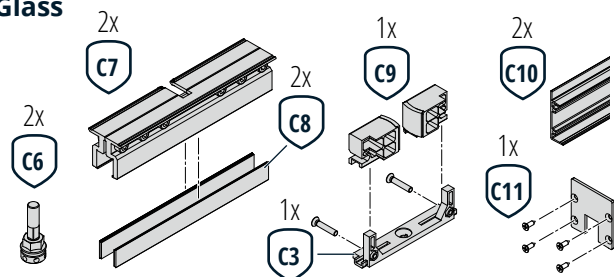


Jamb kit

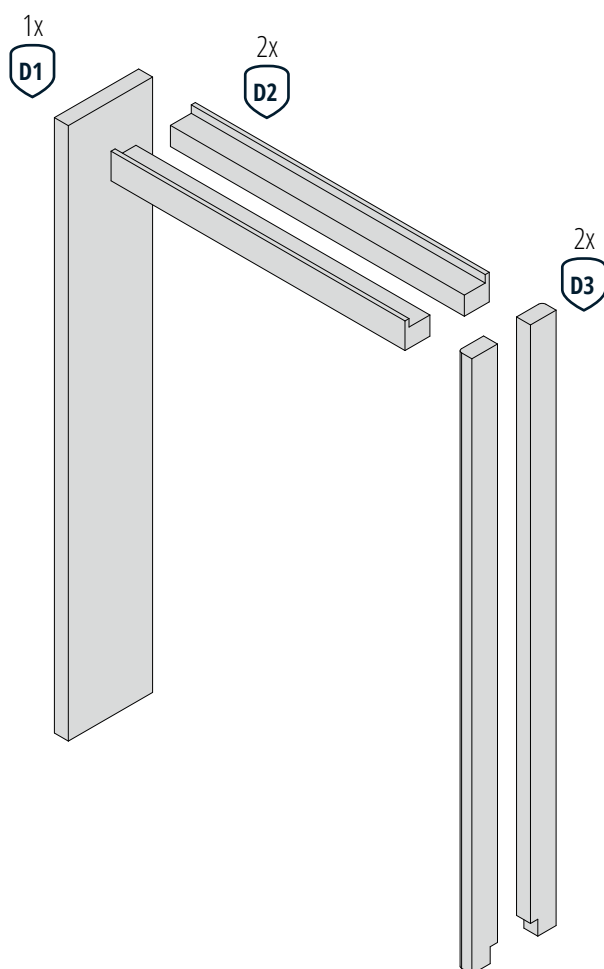

DIMENSIONS


Front view

Wood door leaf with Jamb-Kit

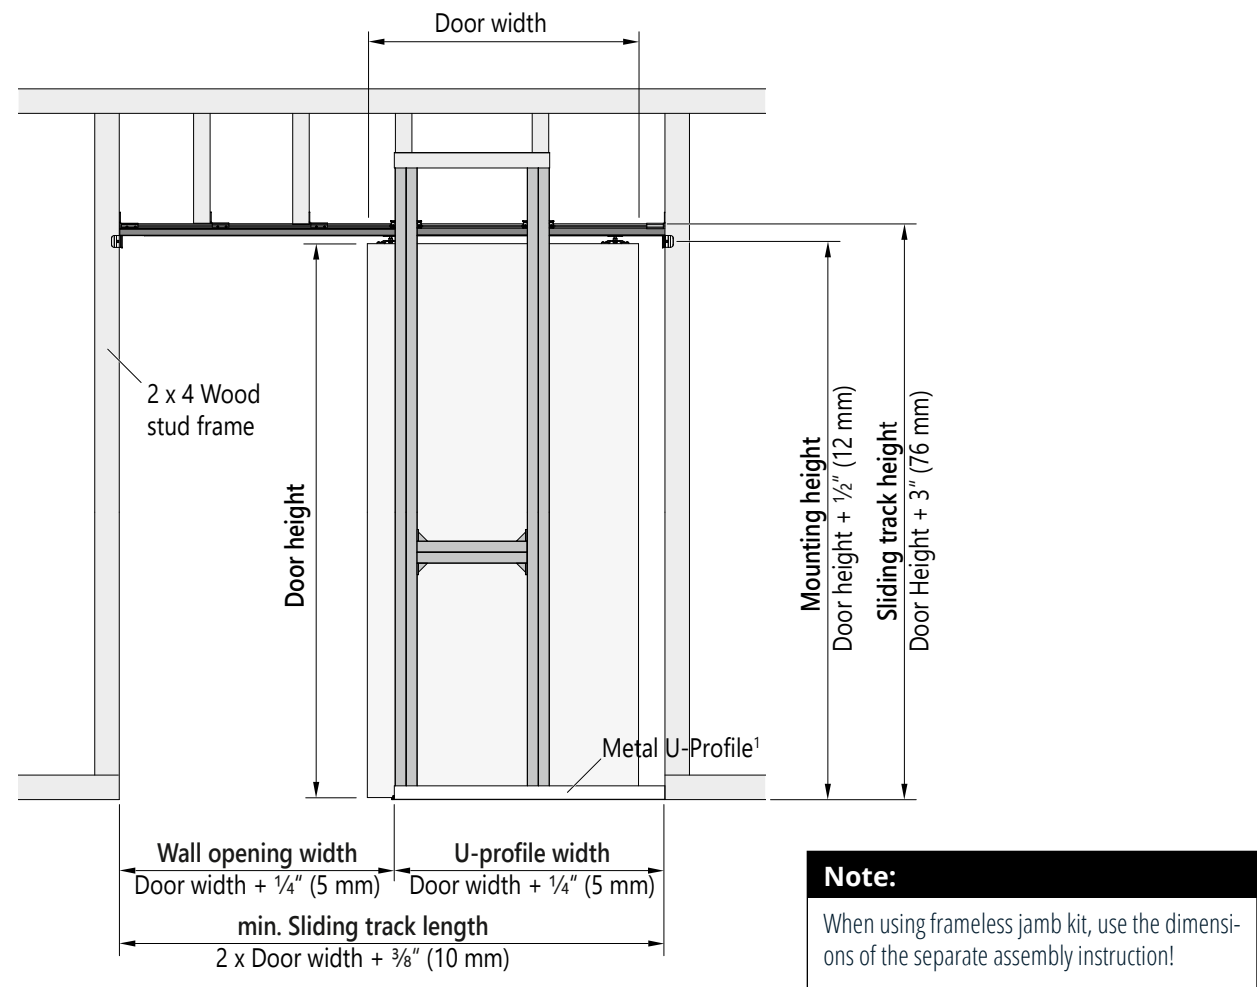

Top view


Wood door leaf with Jamb-Kit

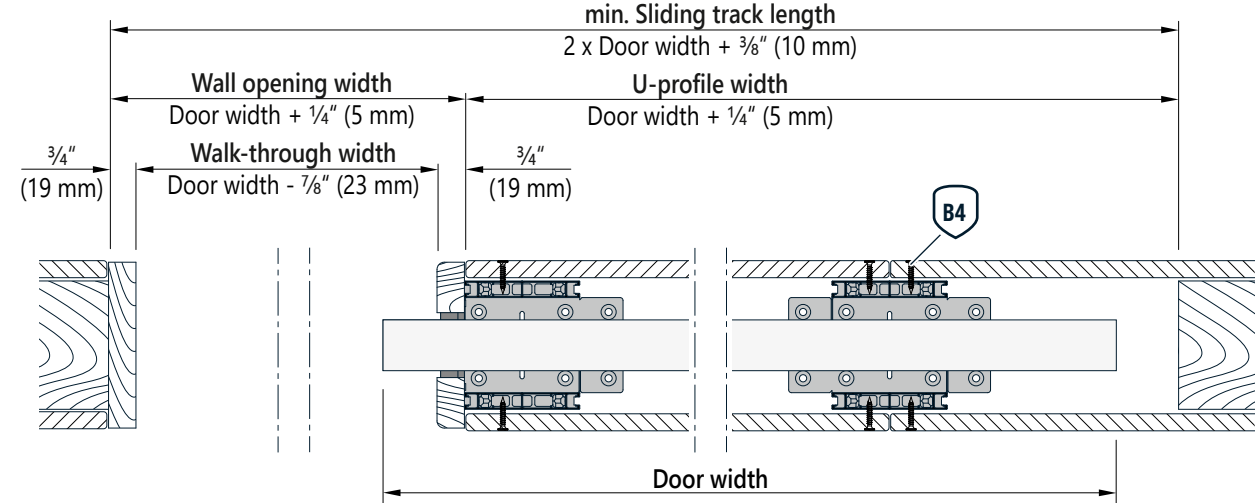

¹ The use is recommended but not needed.

Side view

Wood door leaf with Jamb-Kit

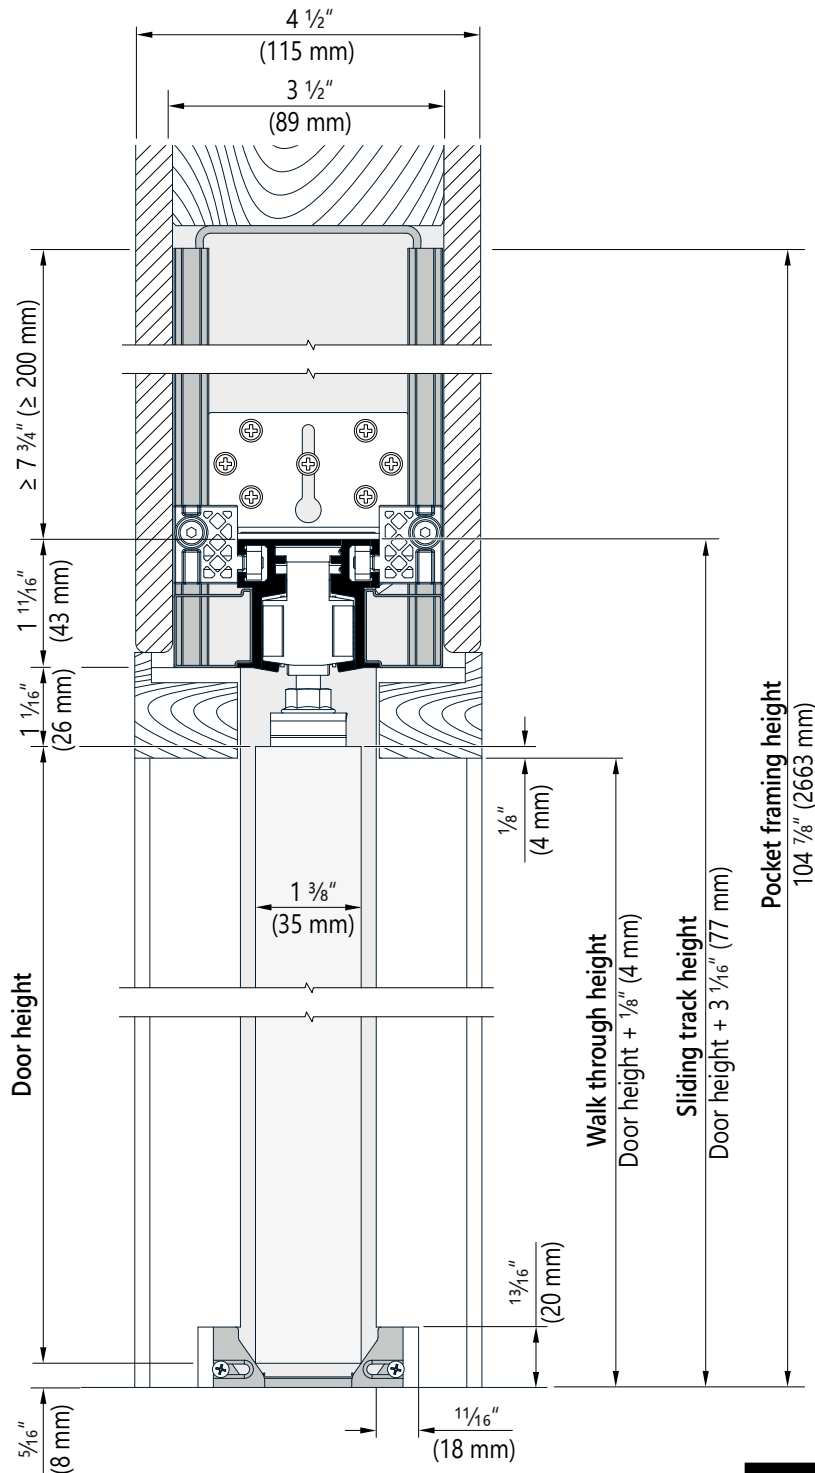


Note:

When using frameless jamb kit, use the dimensions of the separate assembly instruction!

DIMENSIONS


Front view

Glass door leaf with Jamb-Kit

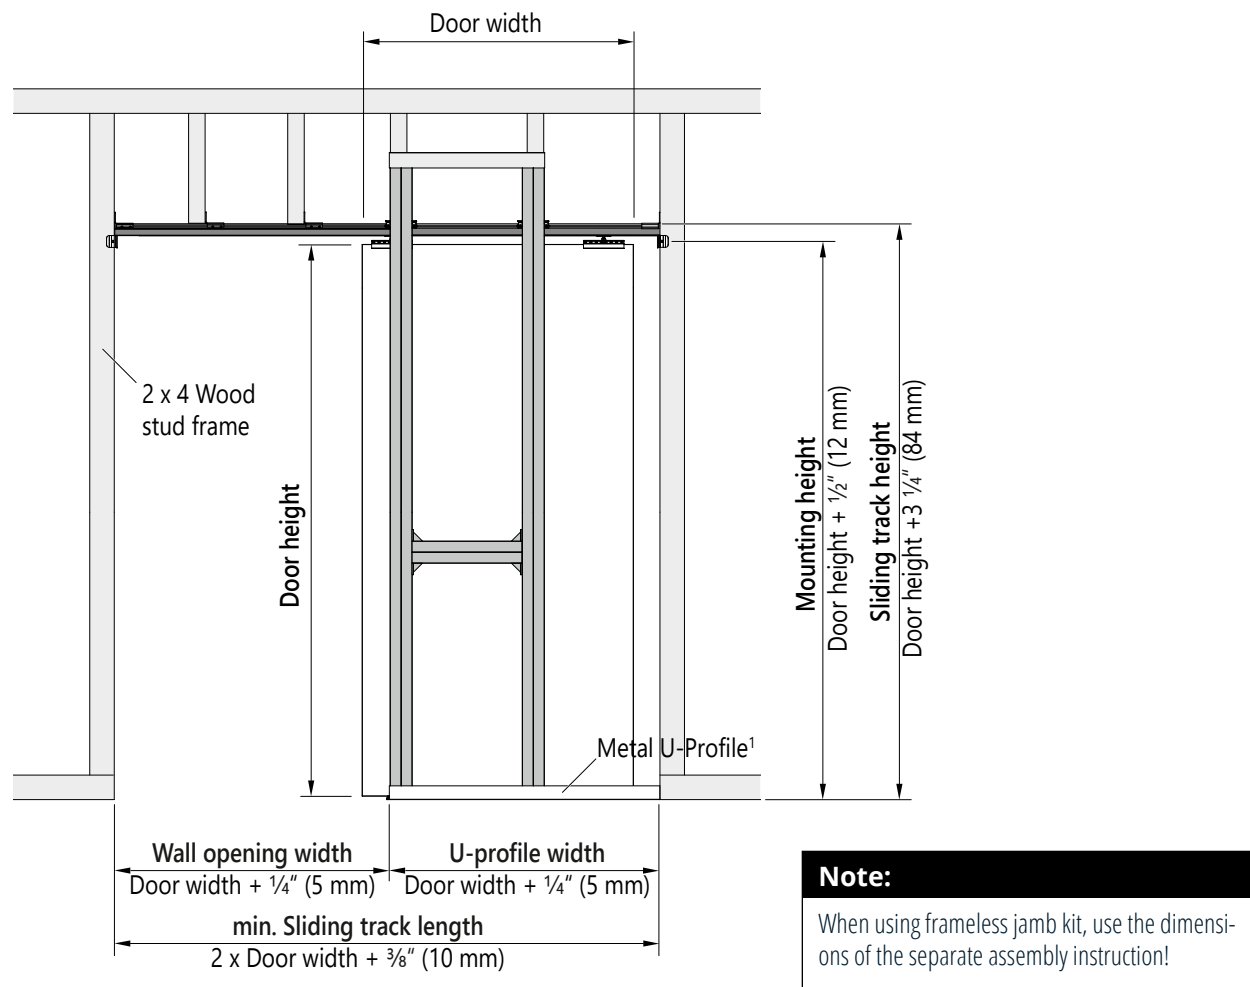


Top view

Glass door leaf with Jamb-Kit

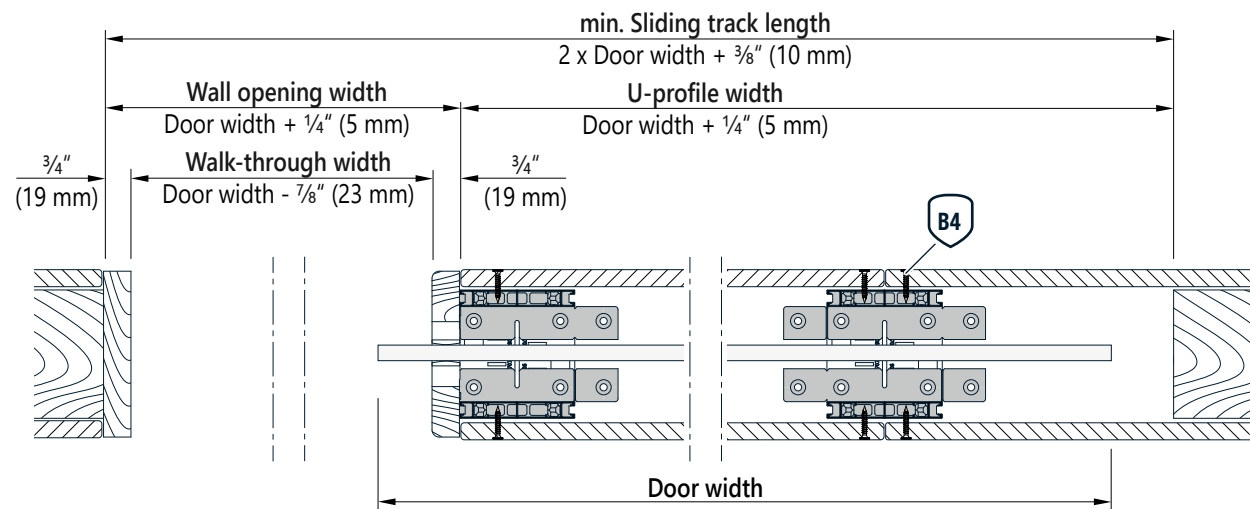

Side view

Glass door leaf with Jamb-Kit

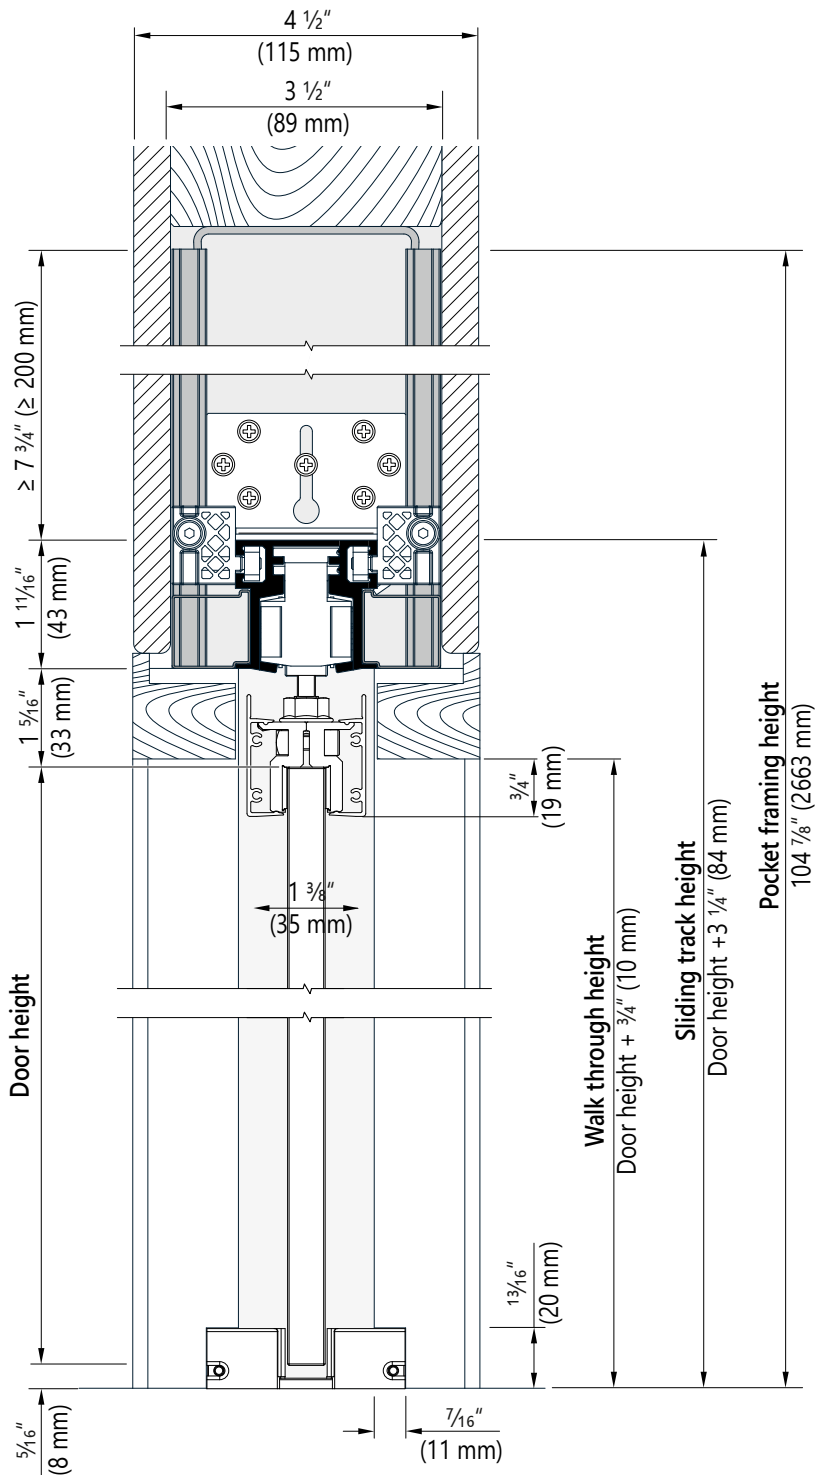


Note:

When using frameless jamb kit, use the dimensions of the separate assembly instruction!

MOUNTING

1.

Door stop side

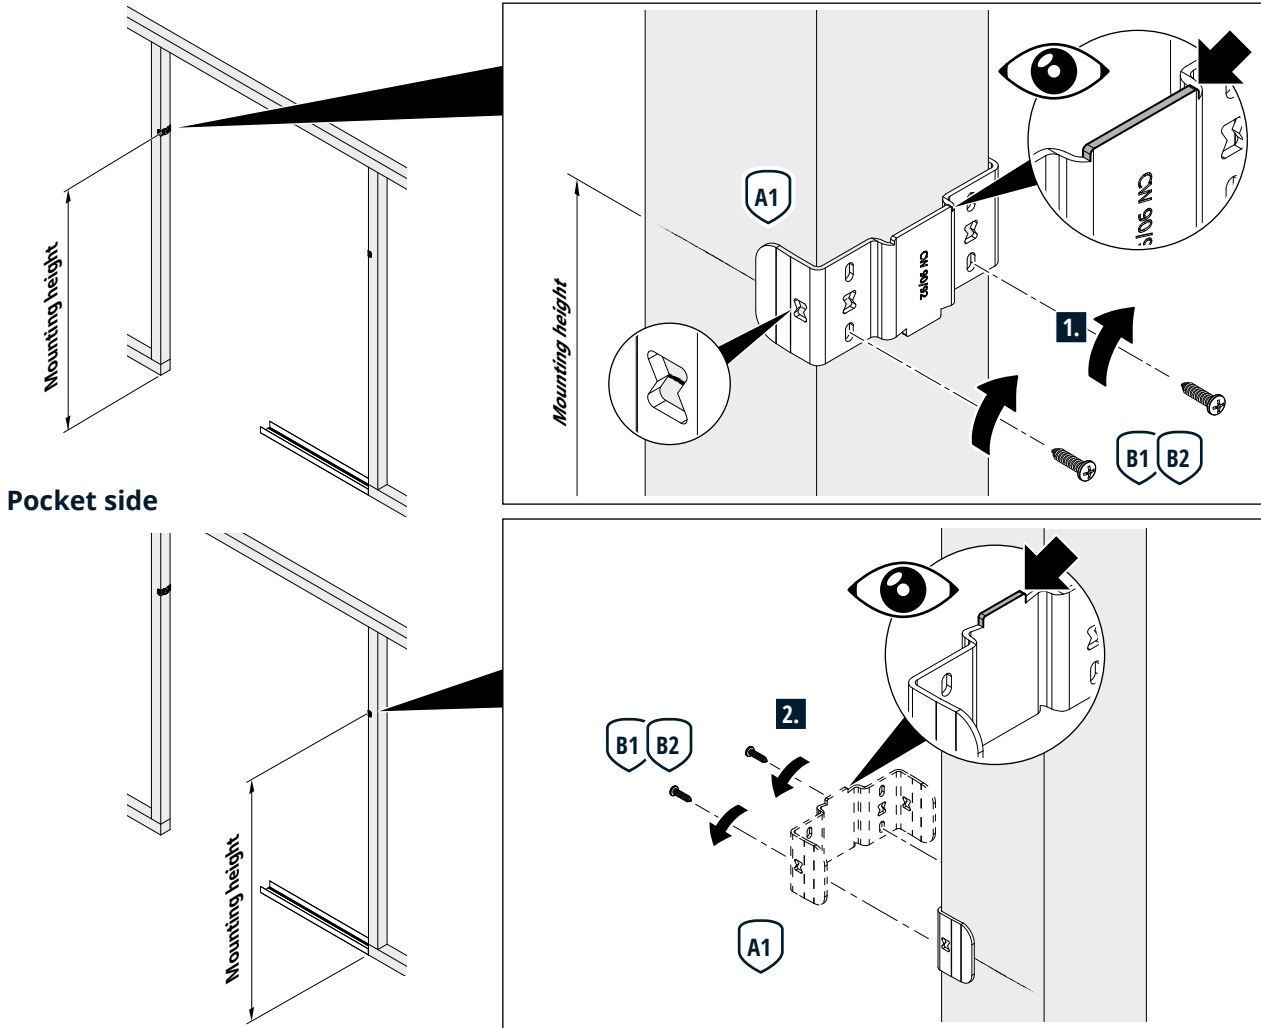



Note:


Find the dimensions of the mounting height on page 6 for wood doors and page 8 for glass doors.

2.



Note:

If door width $\geq 48"$ or between $40"$ and $44"$, continue with step 3!

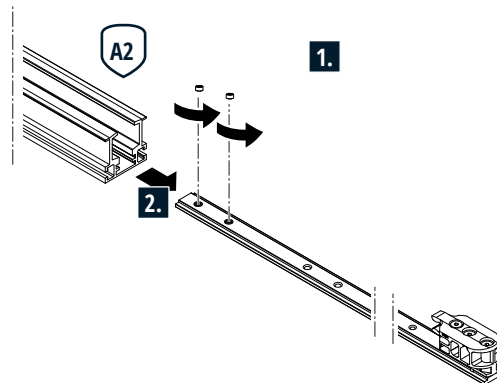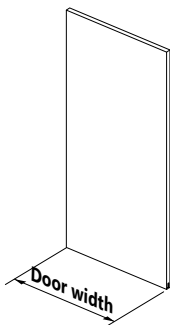


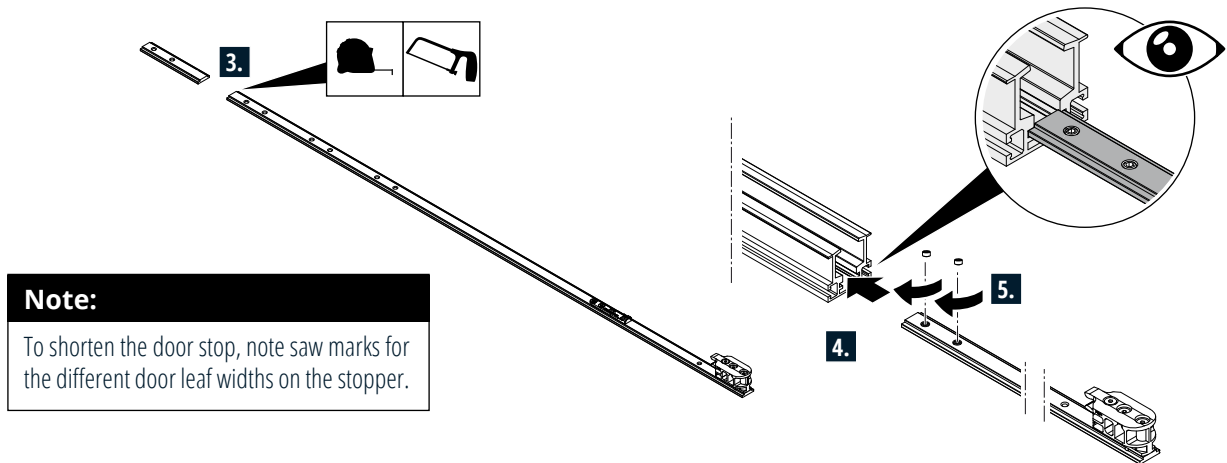



3.

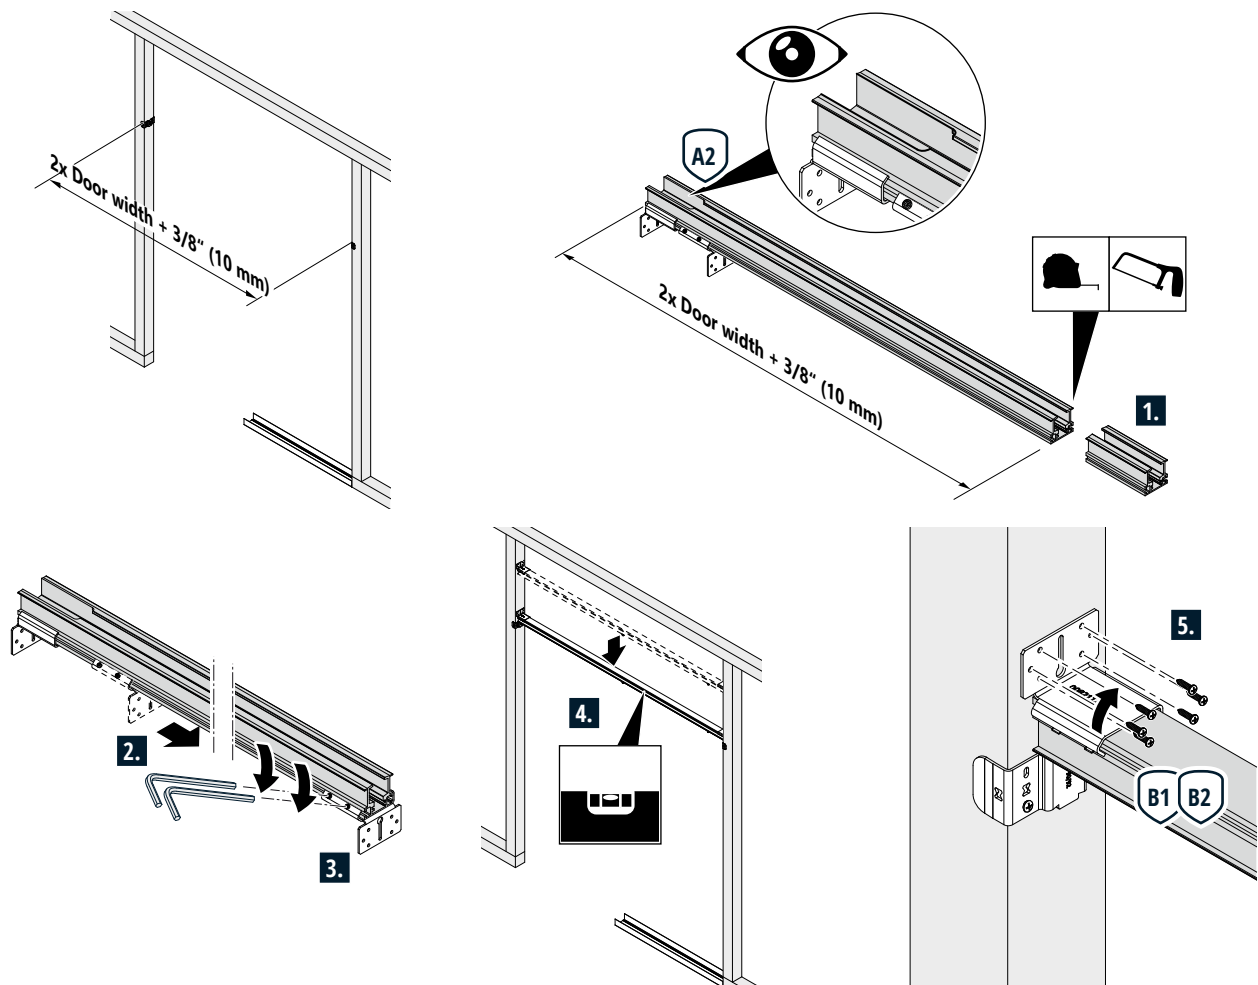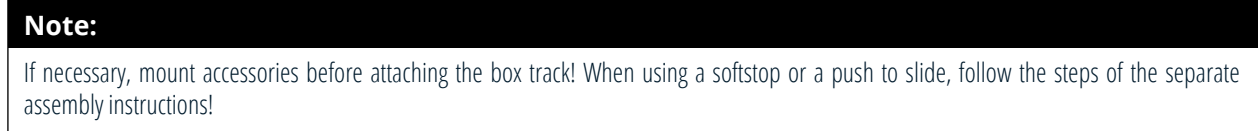

MOUNTING

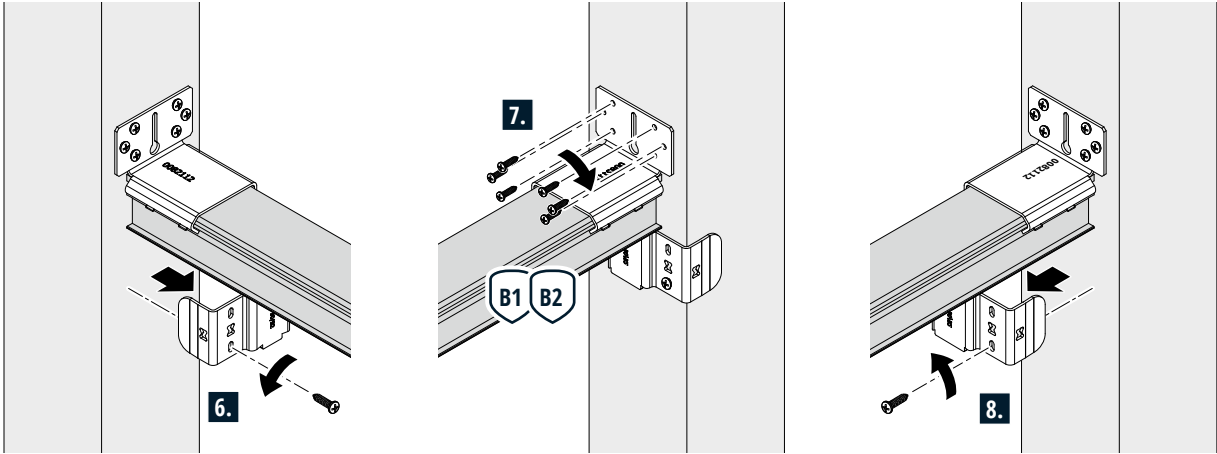


4.

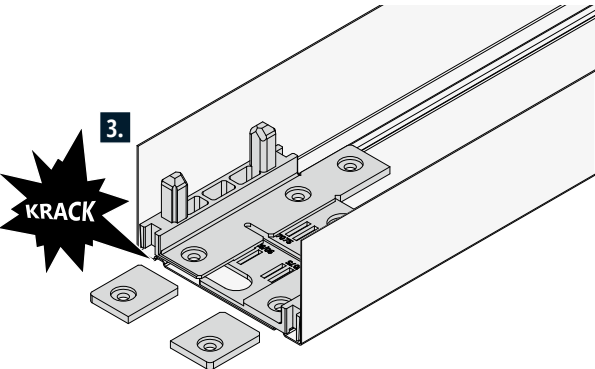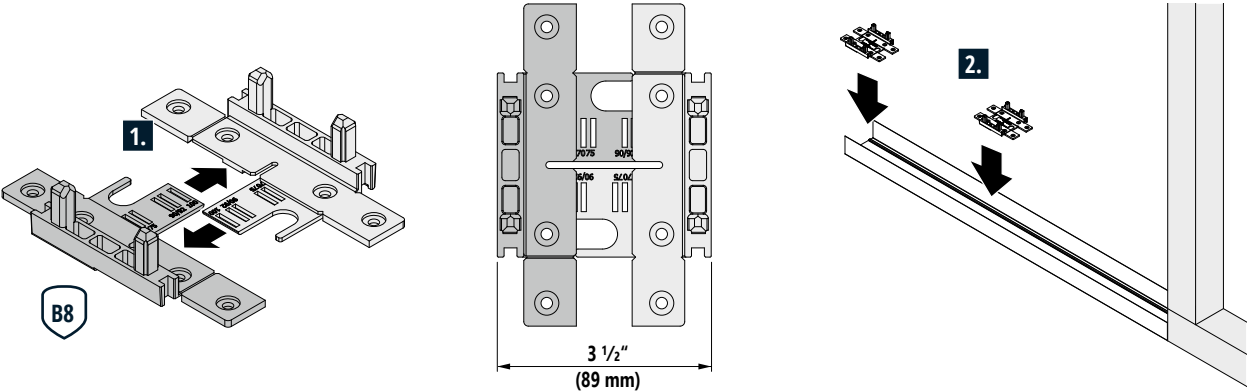


Note:
The fastening material must be adapted to the local conditions. The feet may be either screwed or glued.
The use of a metal U-profile is recommended but not needed.

5.

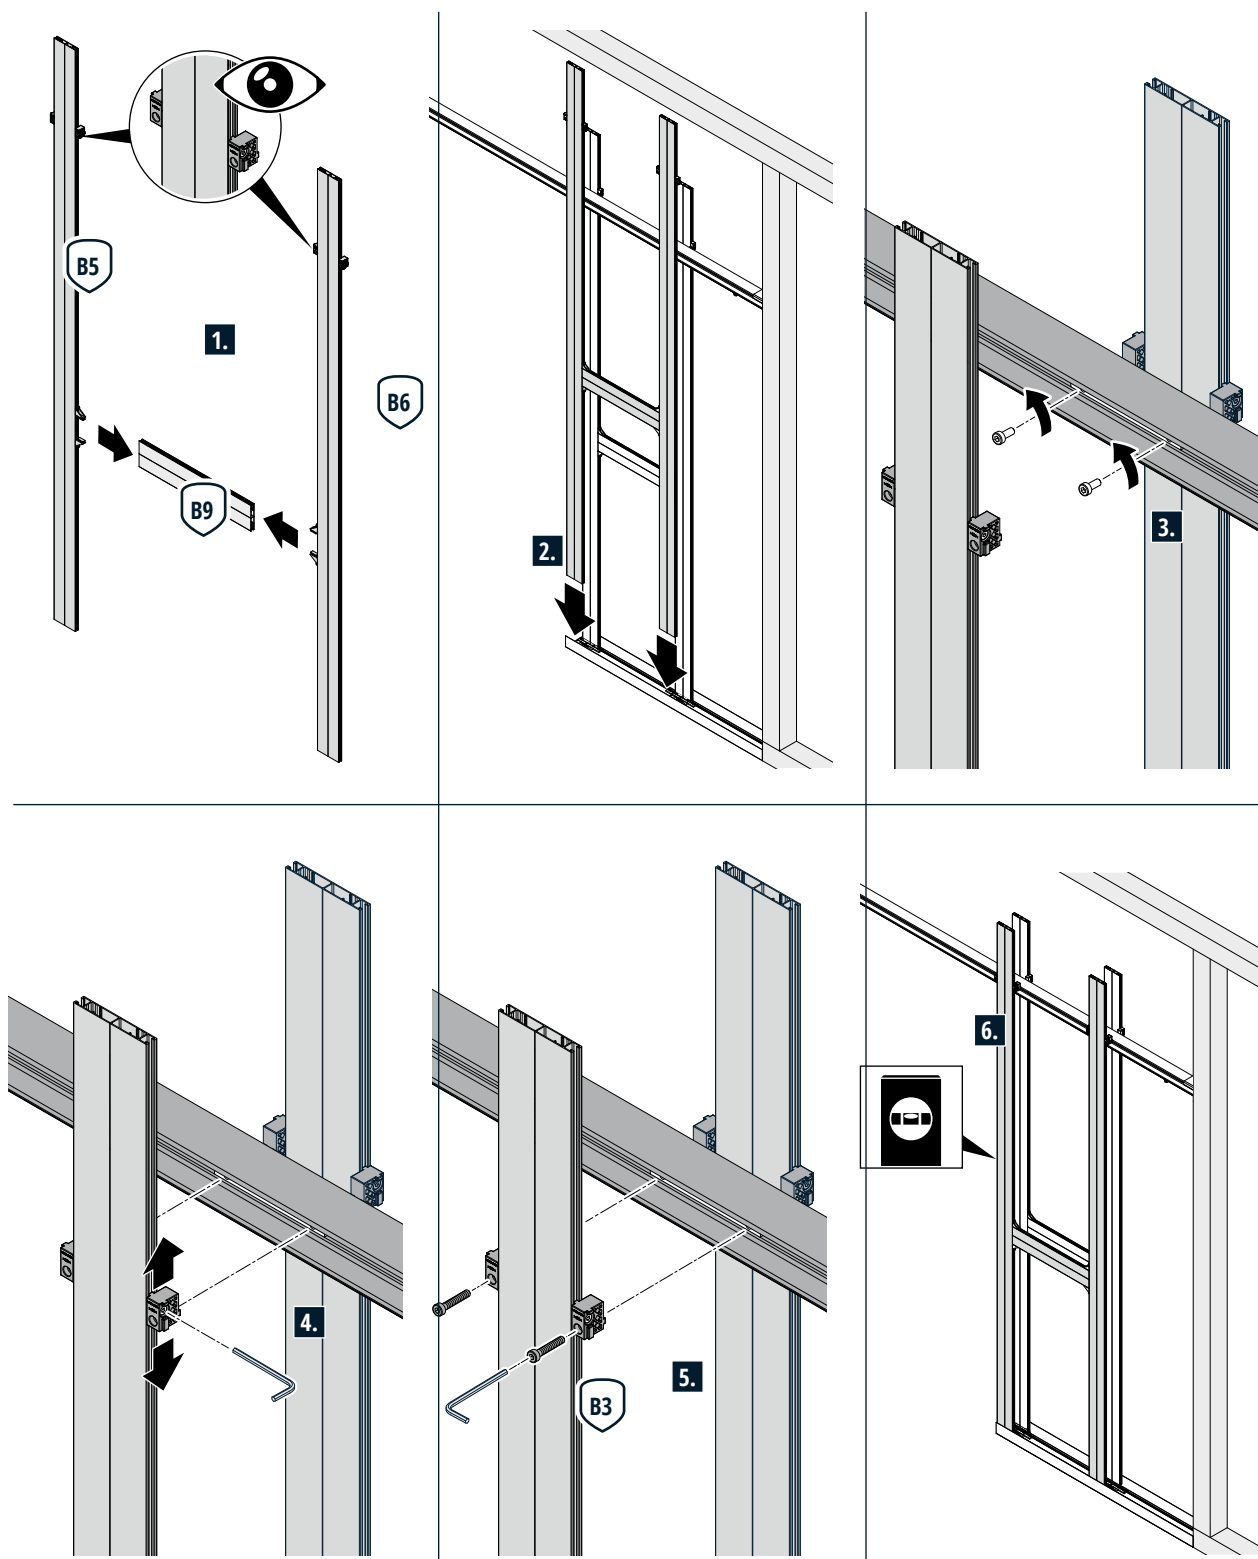


MOUNTING


6.

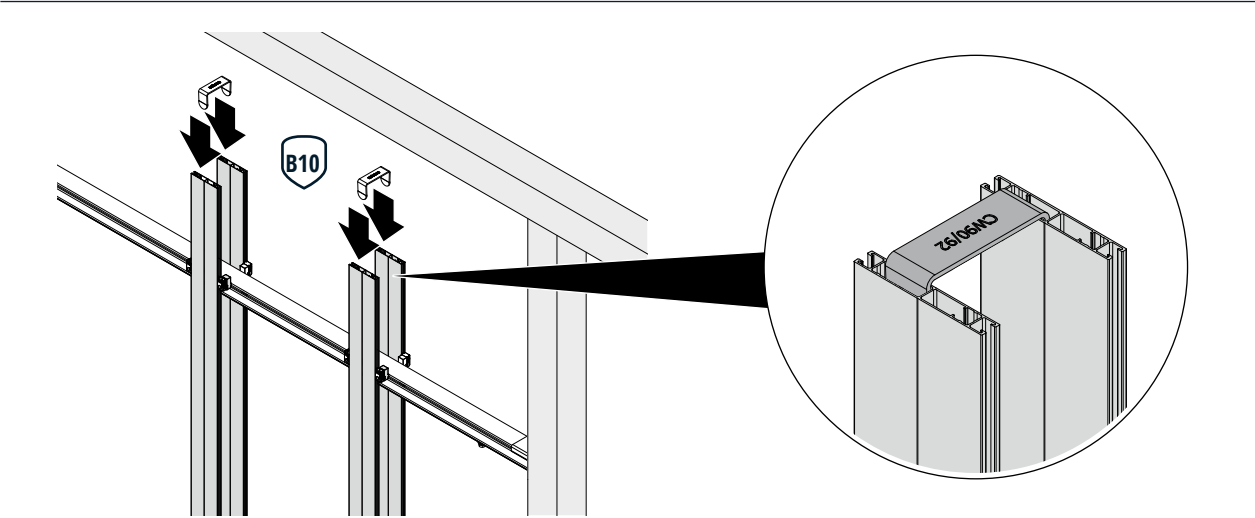


7.

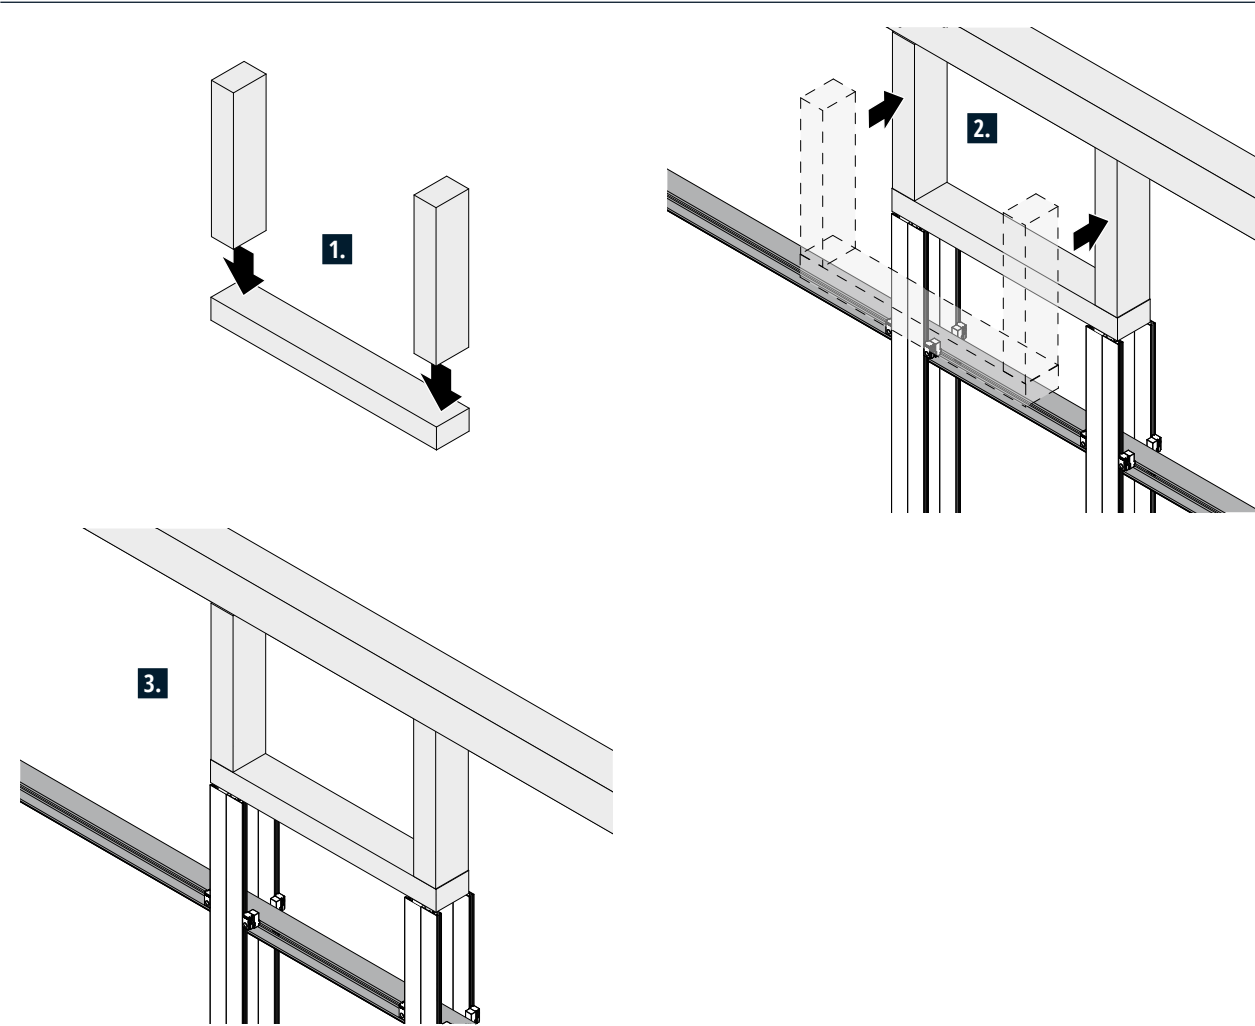

8.



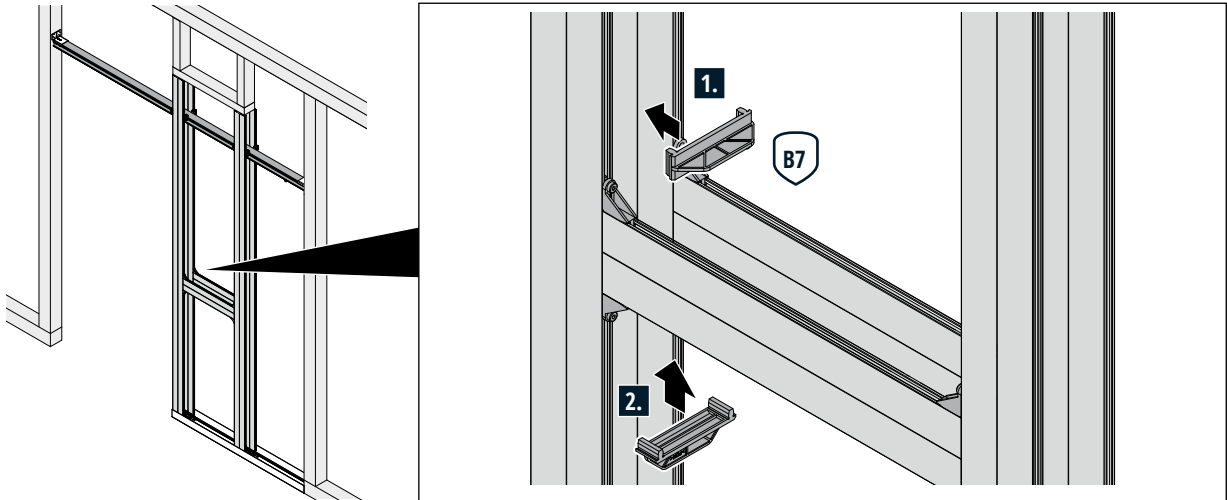


9.

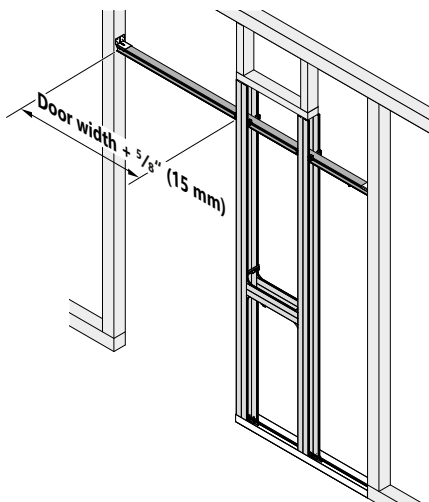


Note:

This step is only for jamb-kits. When using frameless jamb kit, follow the steps of the separate assembly instruction!




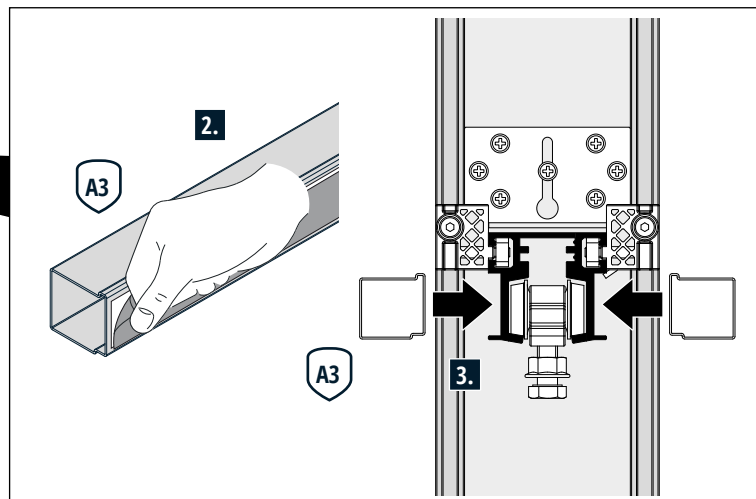
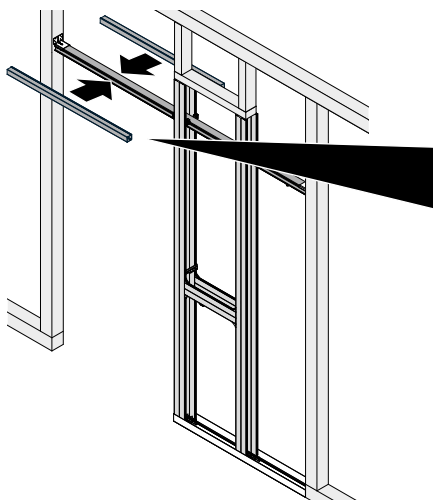
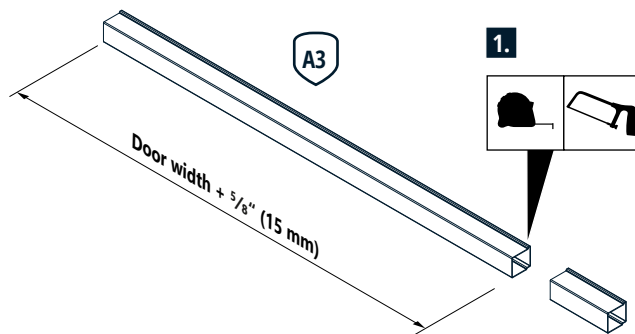


JAMB KIT INSTALLATION

10

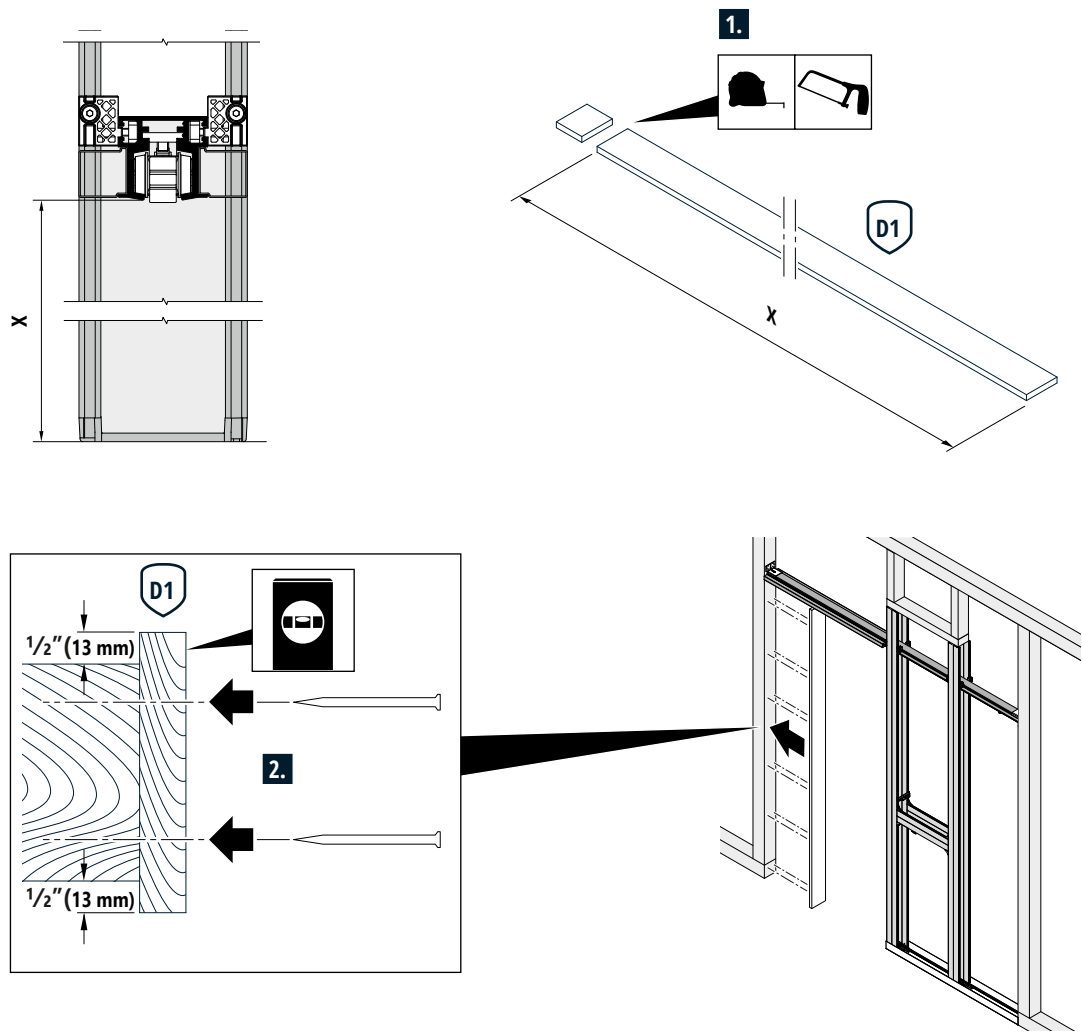

11.

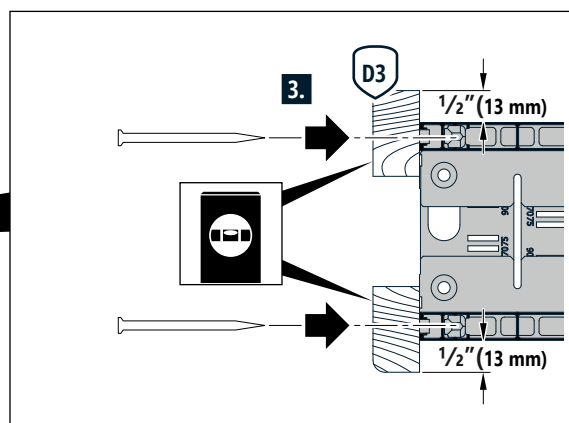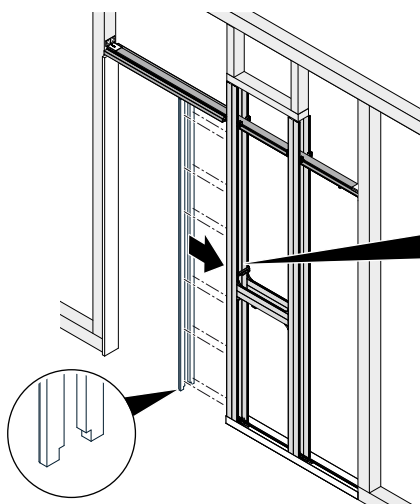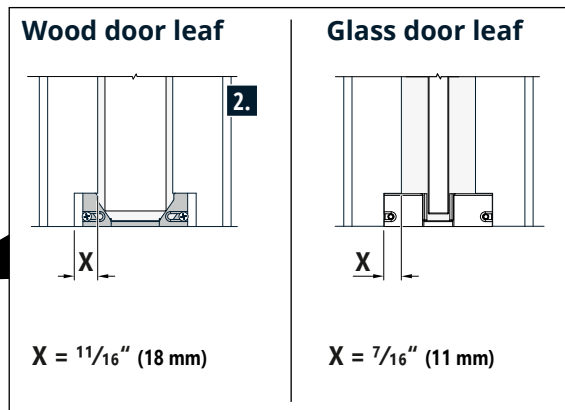
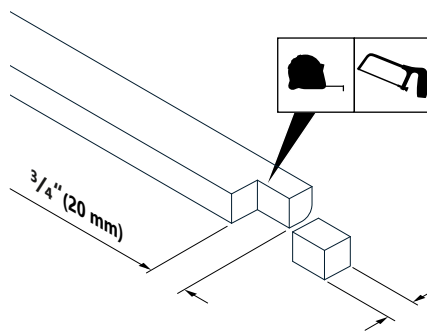
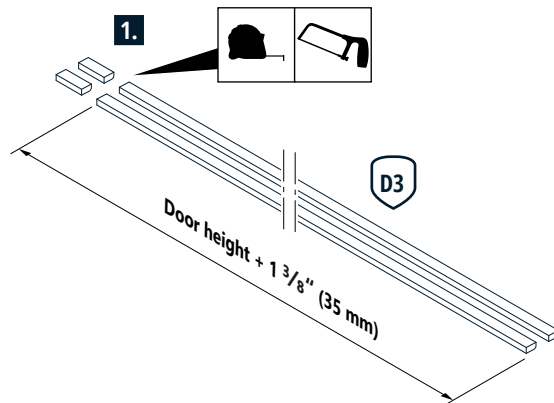
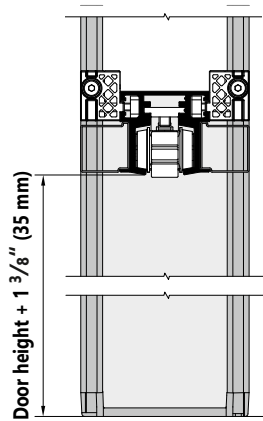


JAMB KIT INSTALLATION


12.

Note:


First mount the door leaf, afterwards install component D2 to the lintel!

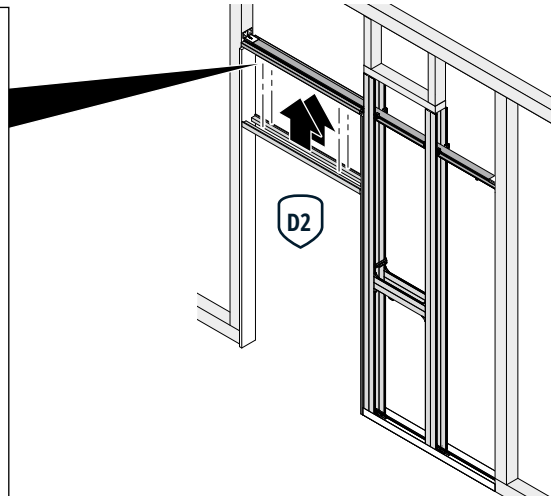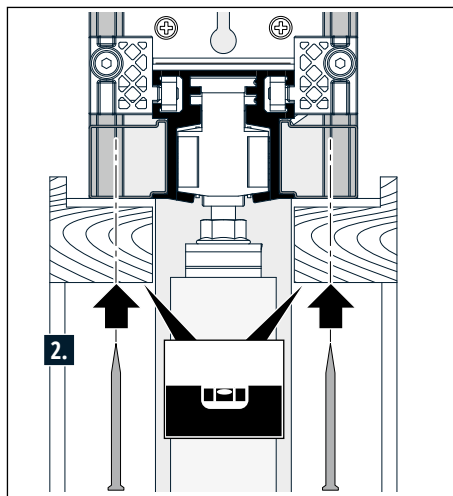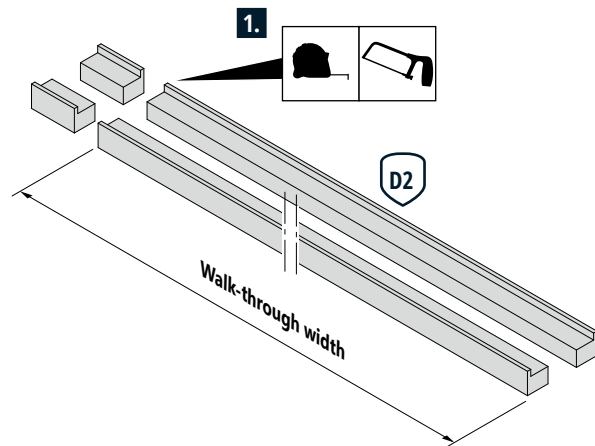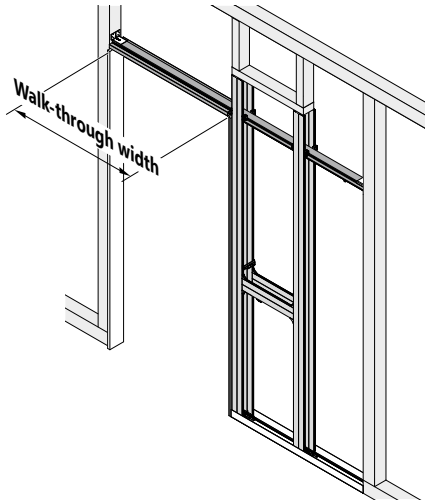


13.

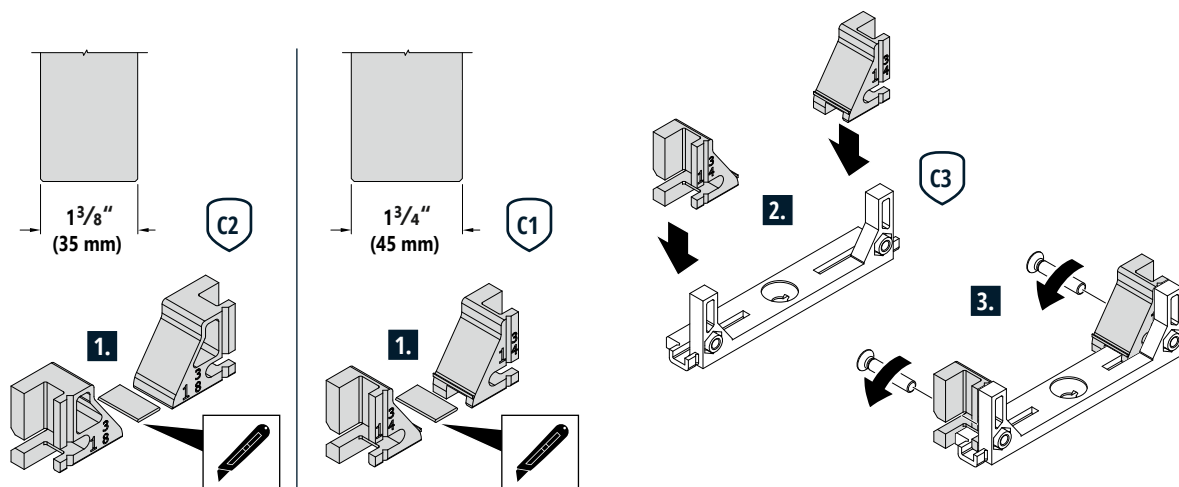

With Jamb-Kit

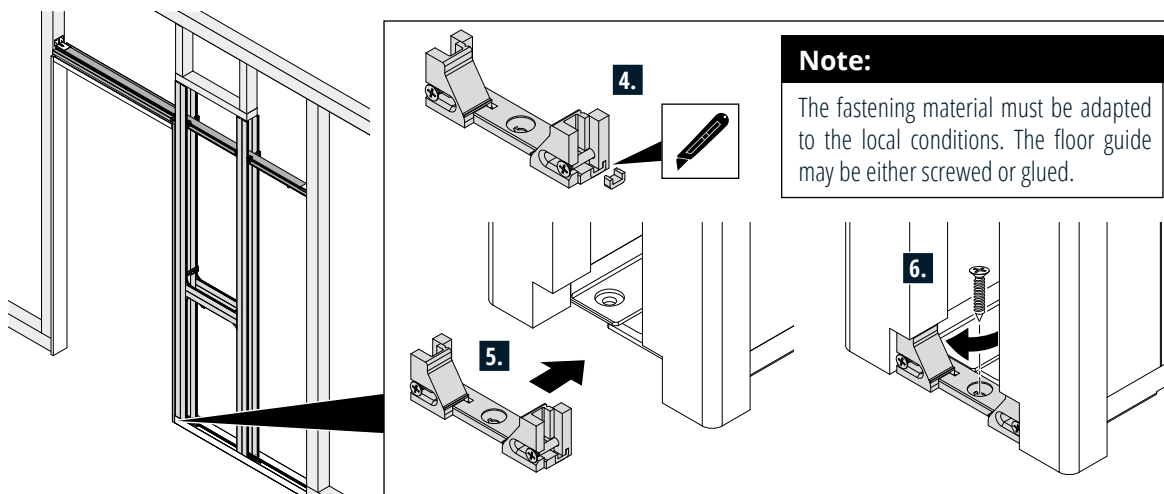


With Frameless jamb kit

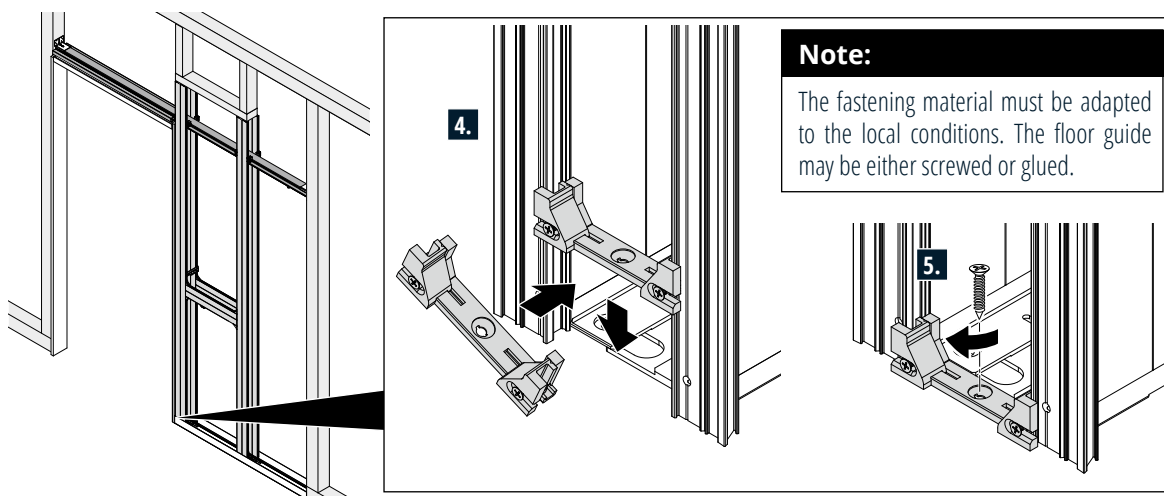


WOOD DOOR LEAF MOUNTING



14.

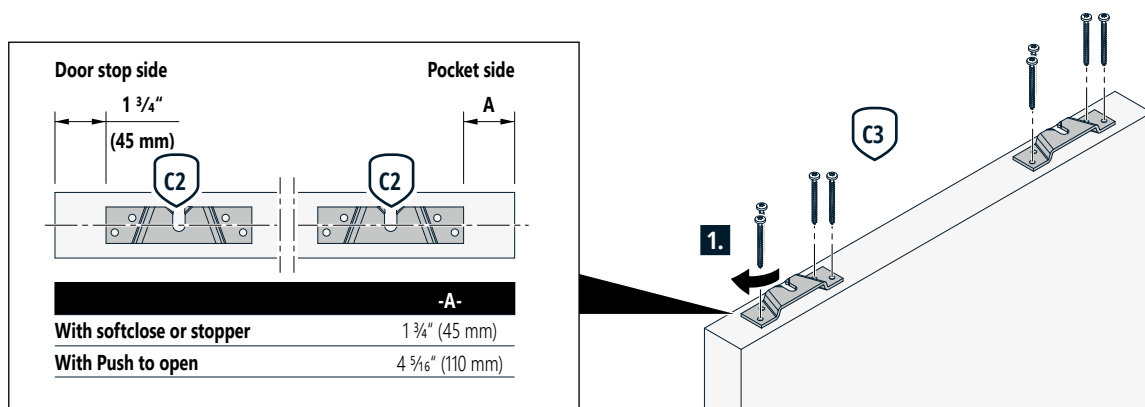





15.

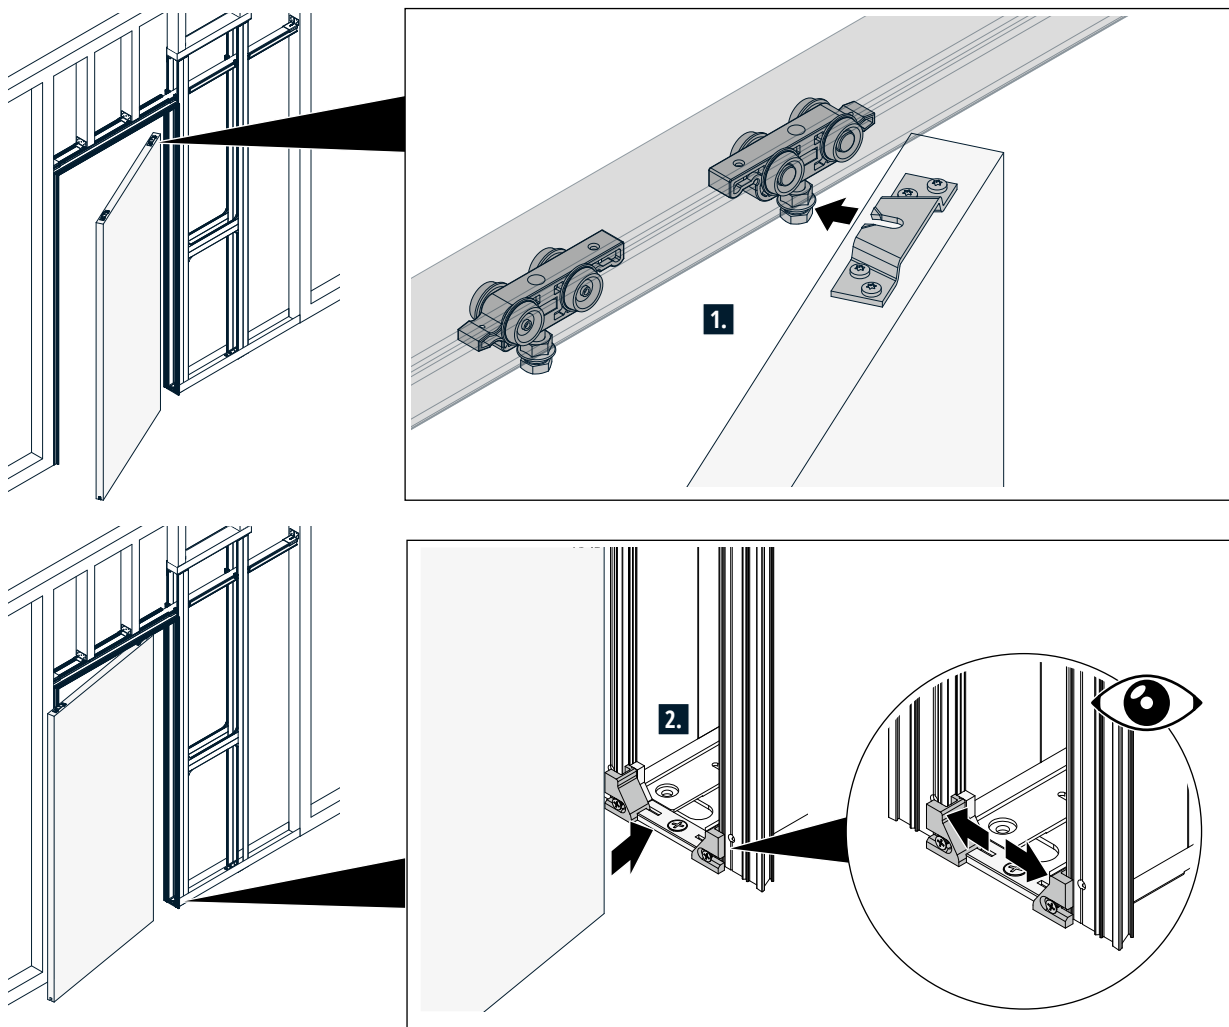

WOOD DOOR LEAF MOUNTING

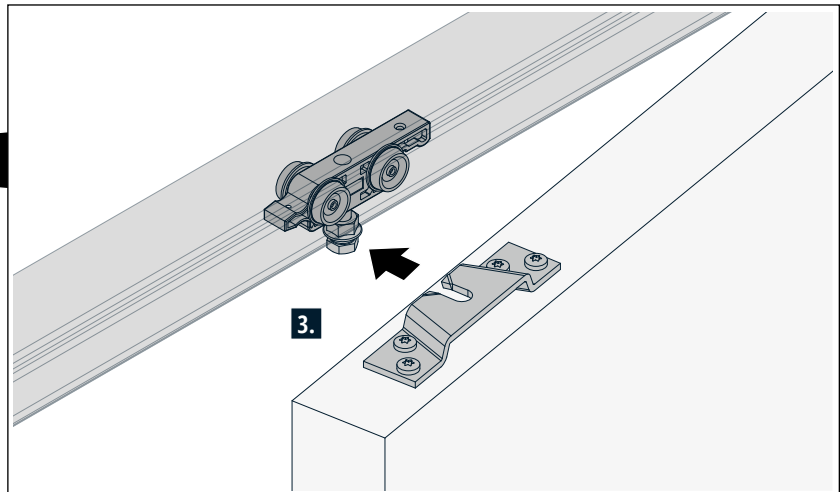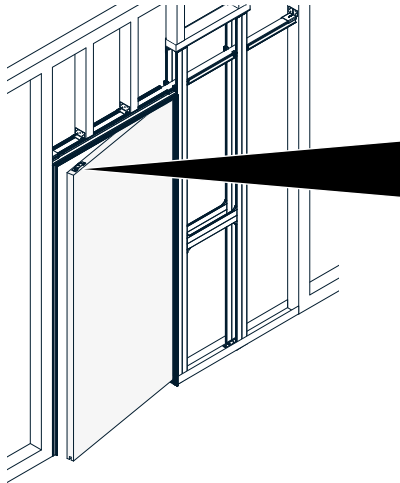


16.

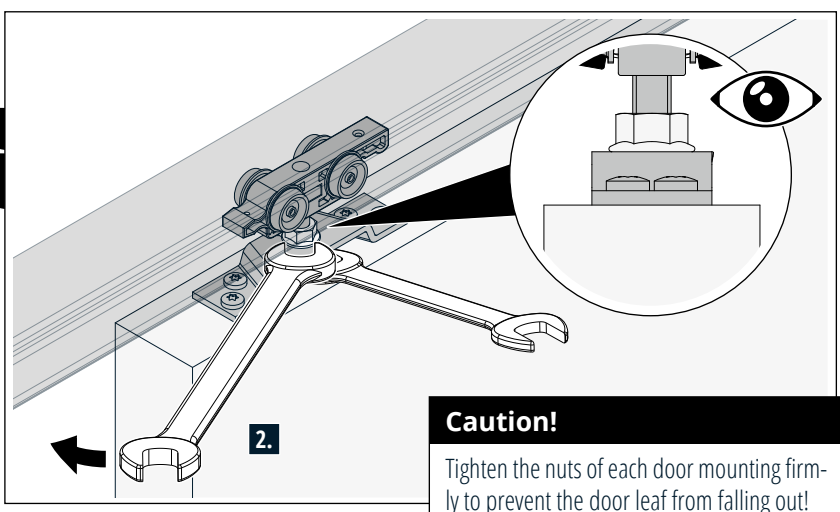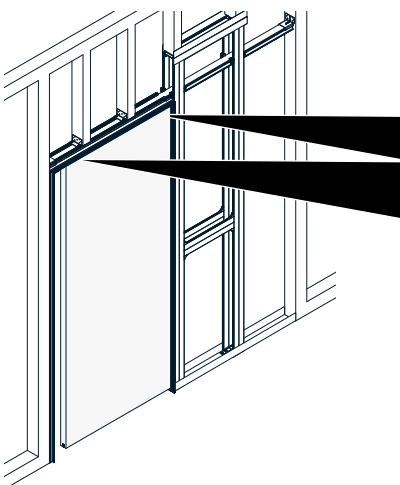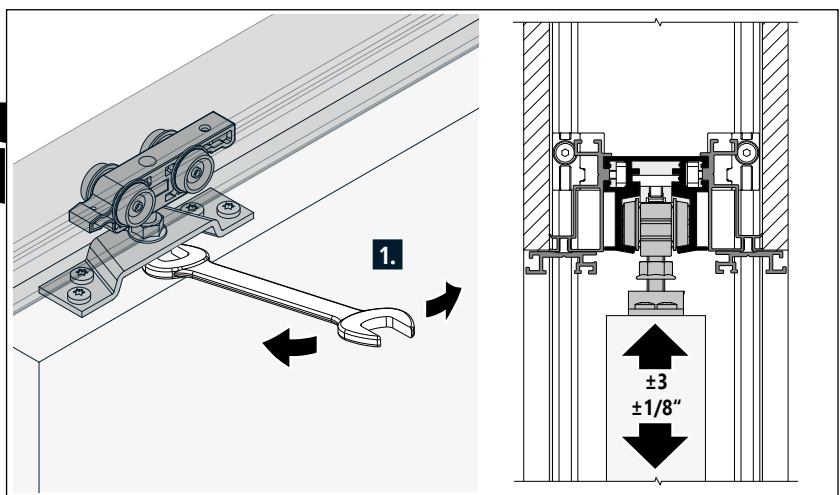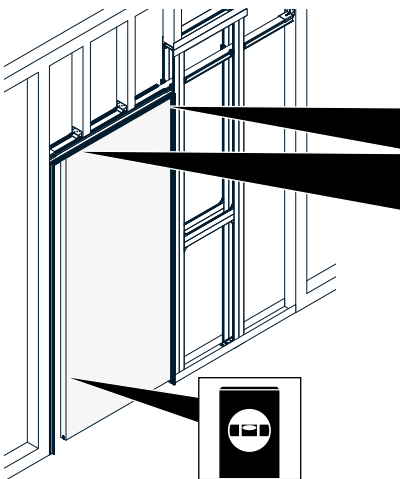

WOOD DOOR LEAF MOUNTING


17.

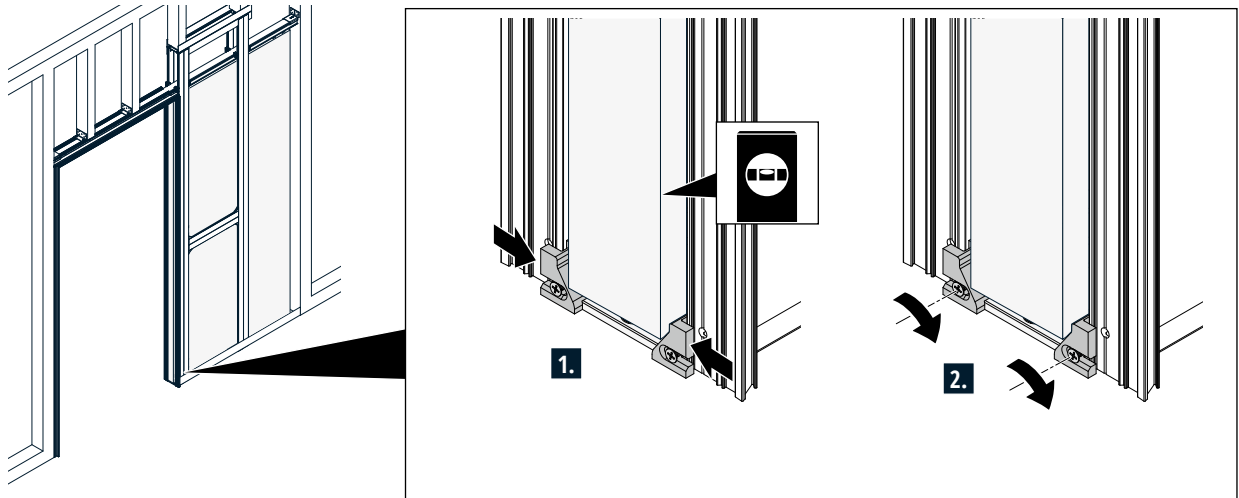


Note:

Go to Step 19 and adjust the endposition of the door stops!


13.

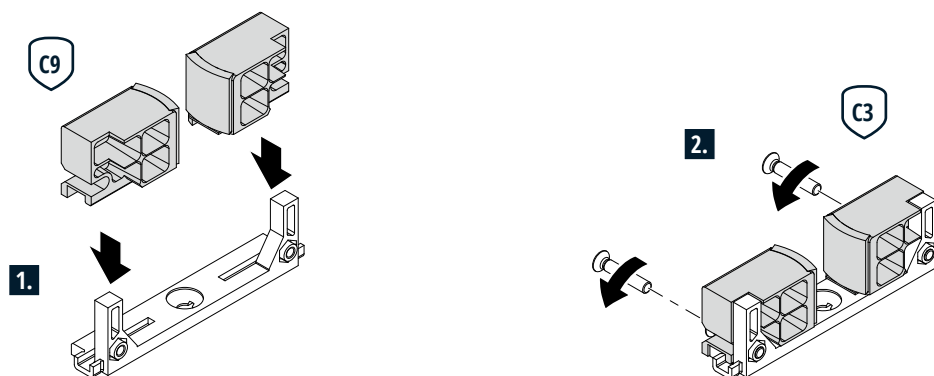

With Jamb-Kit

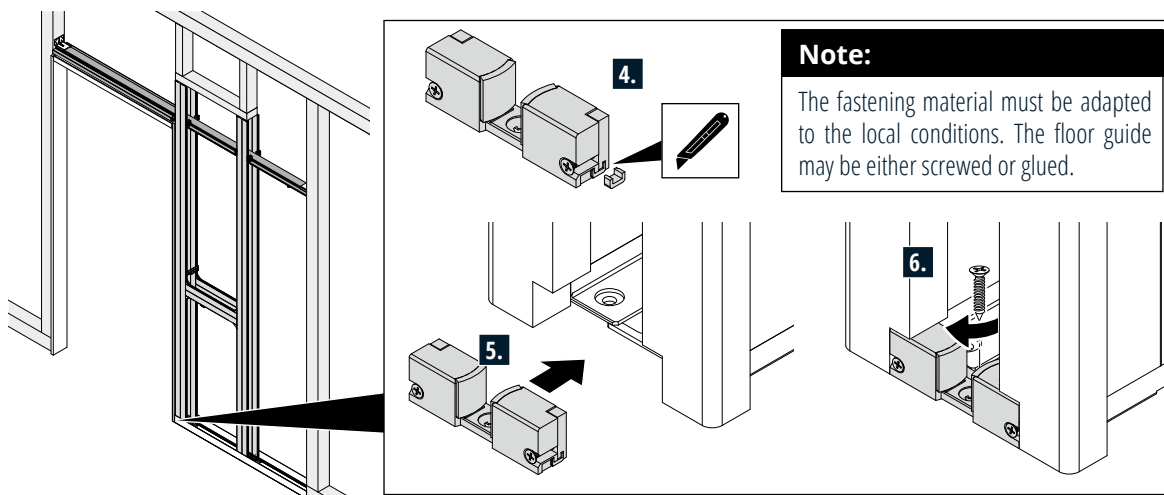


With Frameless jamb kit

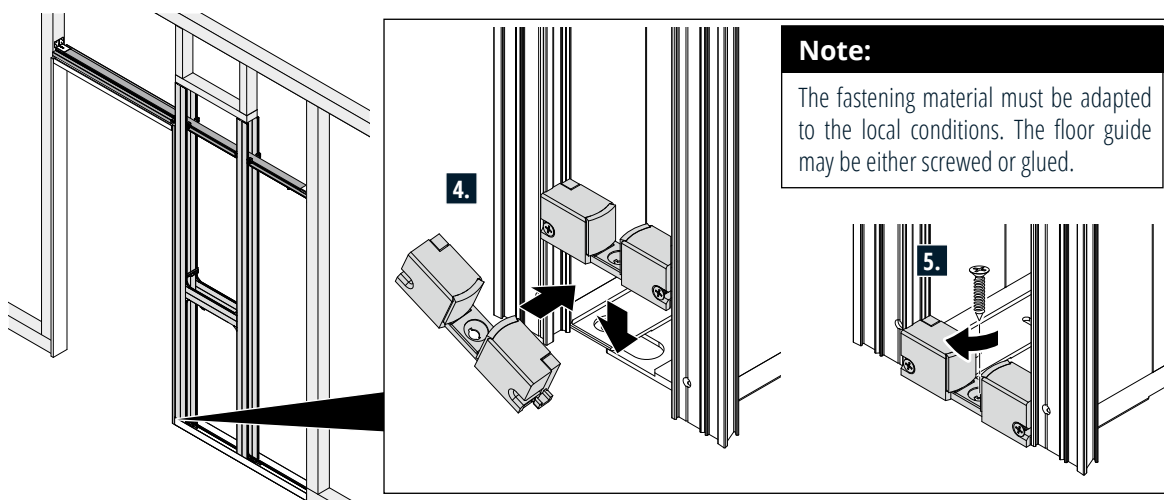


GLASS DOOR LEAF MOUNTING







14.

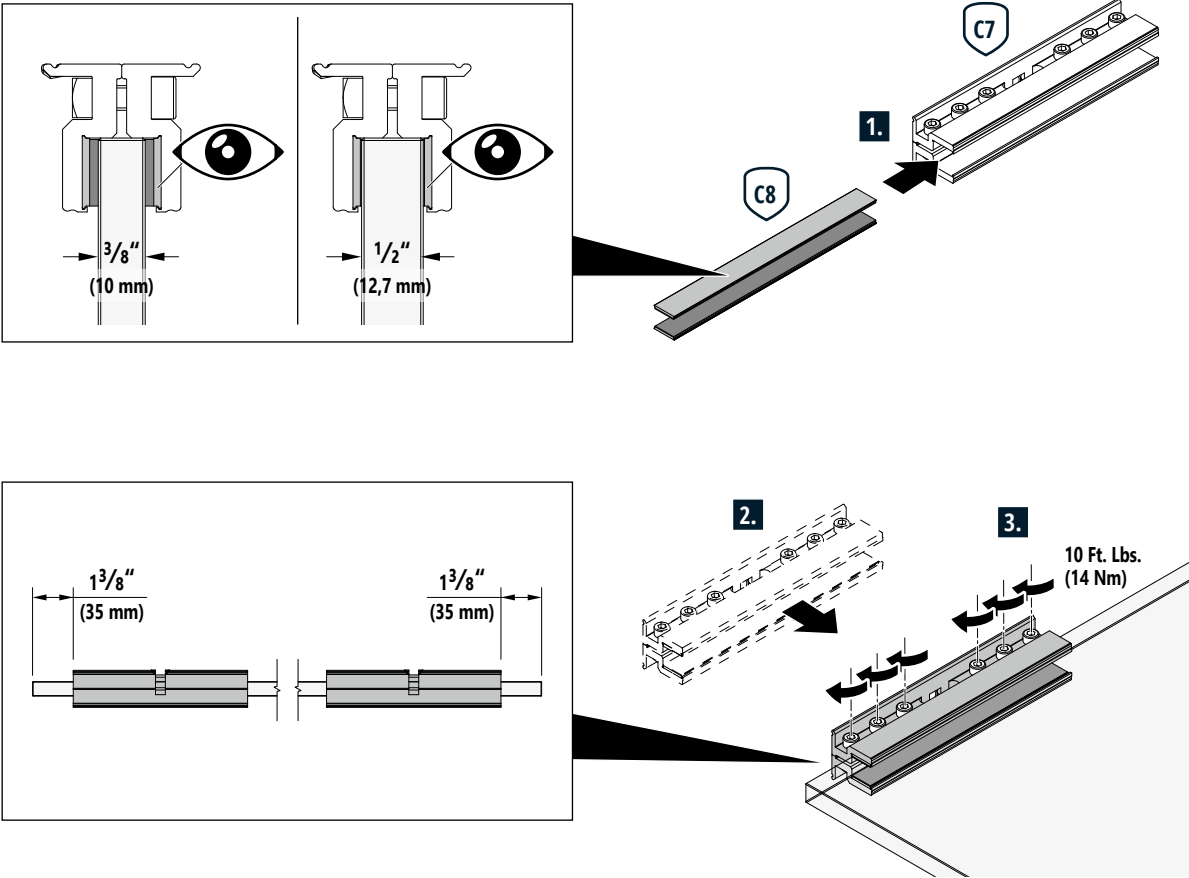

15.

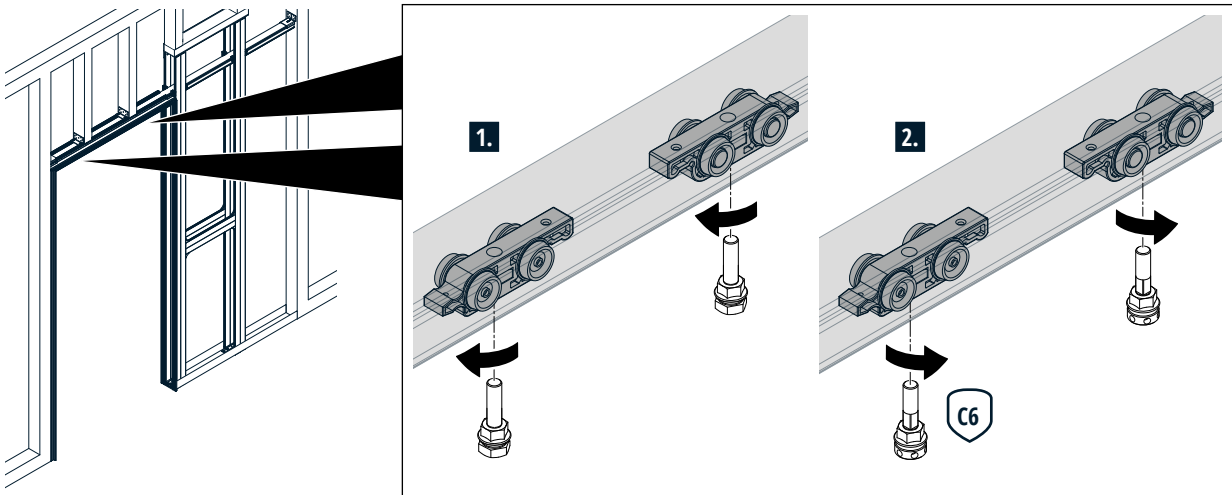


GLASS DOOR LEAF MOUNTING

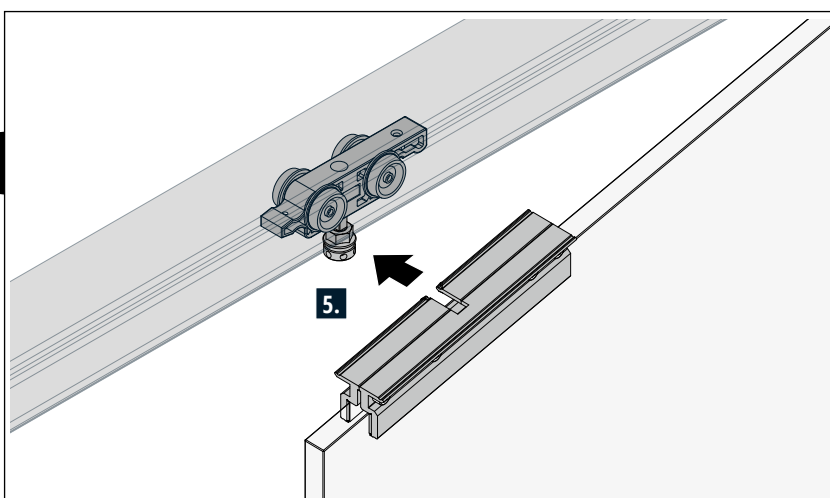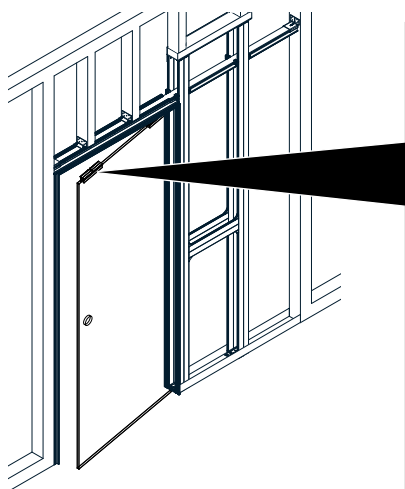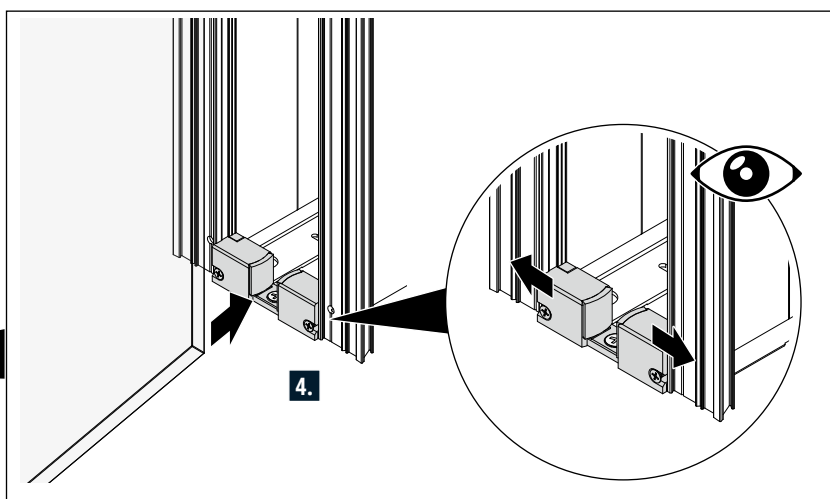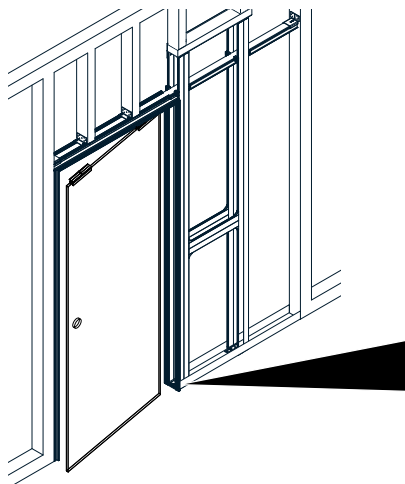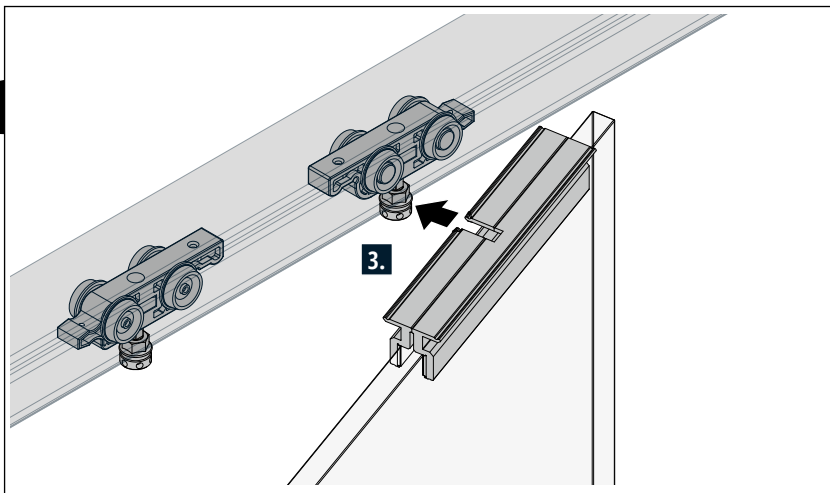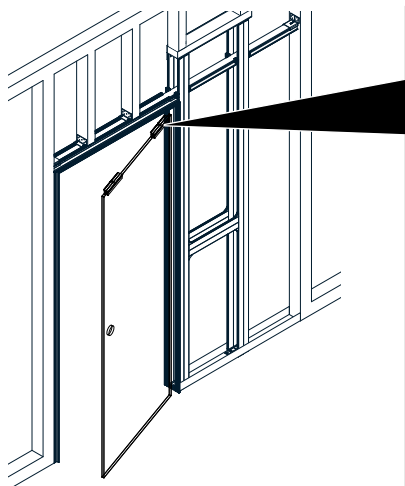


GLASS DOOR LEAF MOUNTING

16.

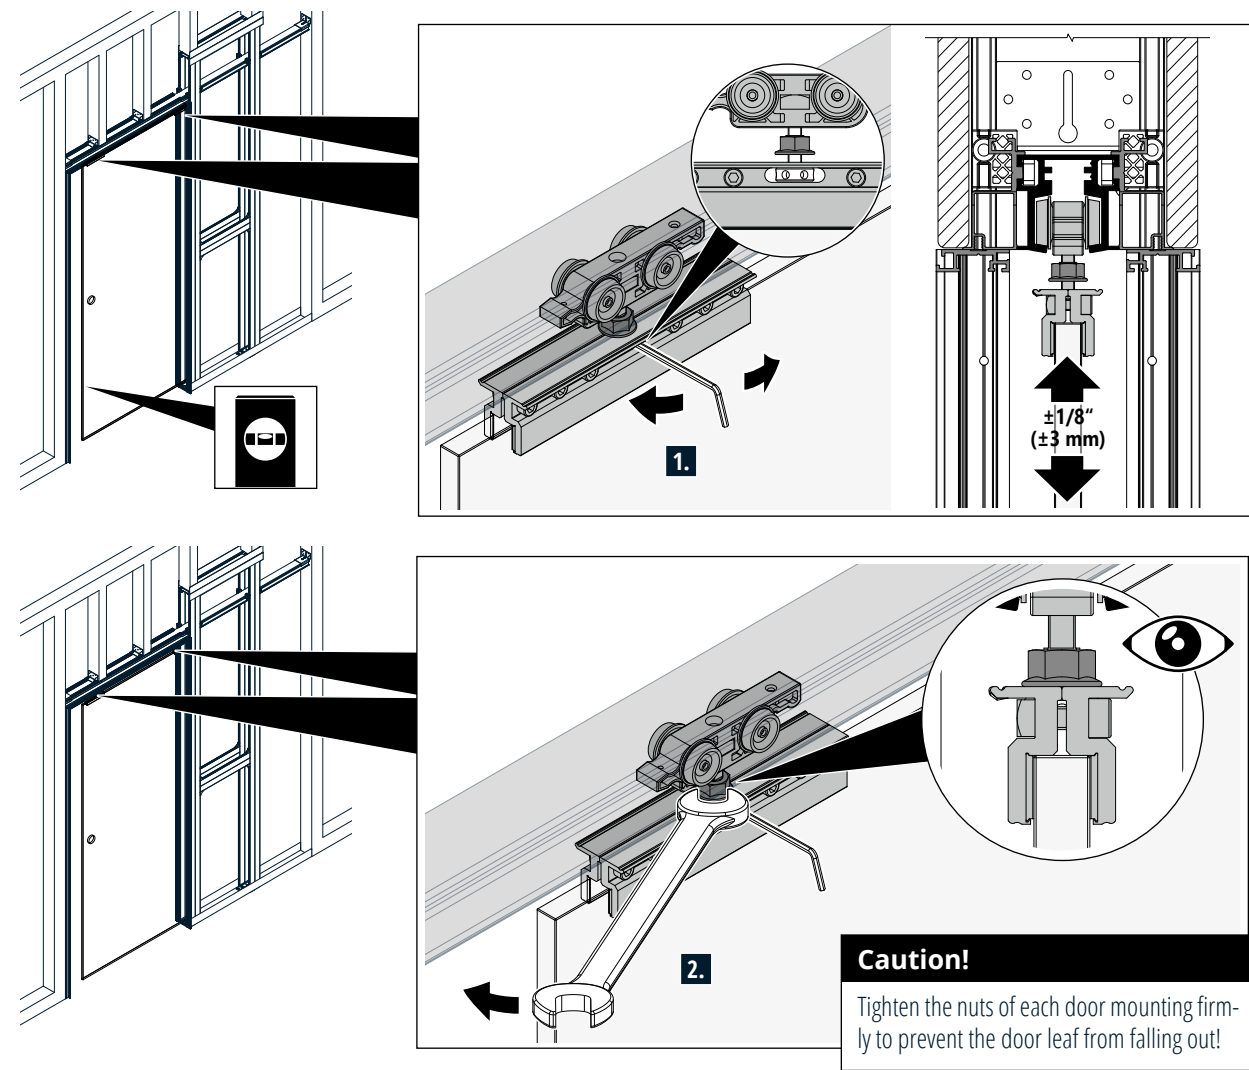


17.

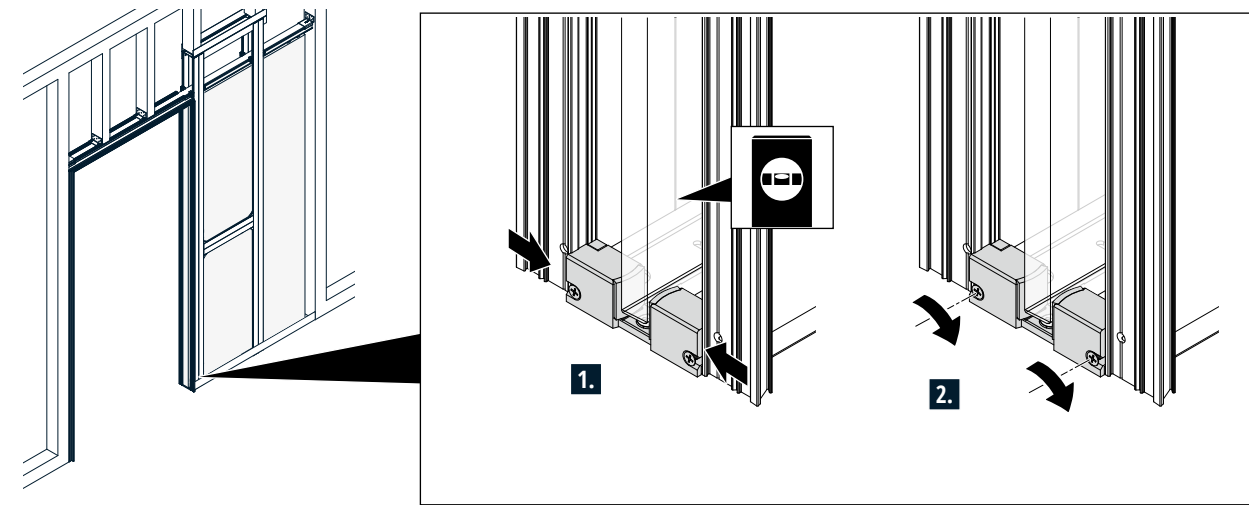


DOOR STOP POSITION SETTING

18.

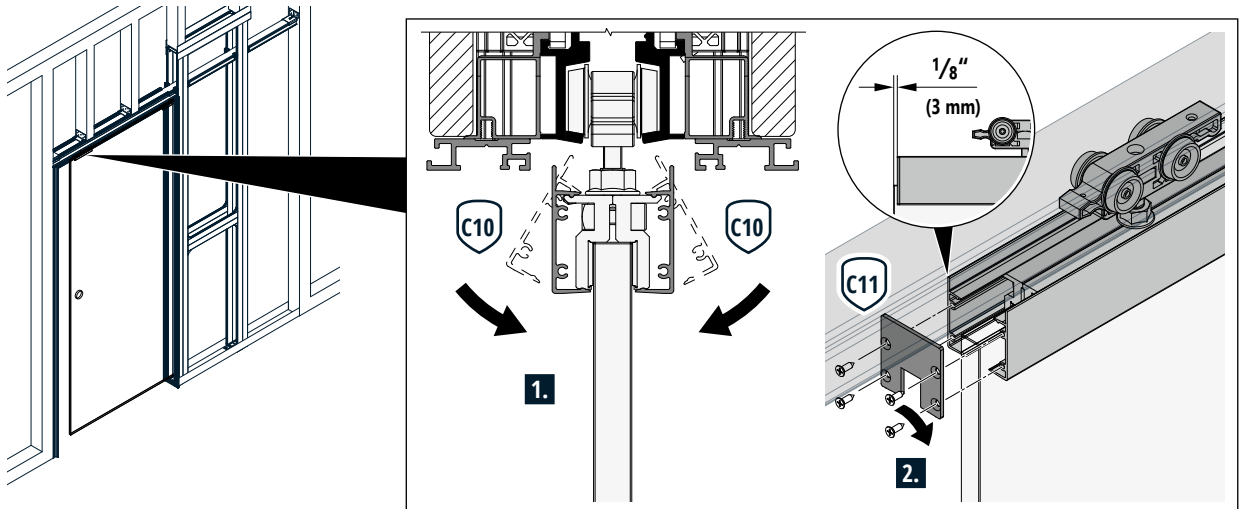

19.

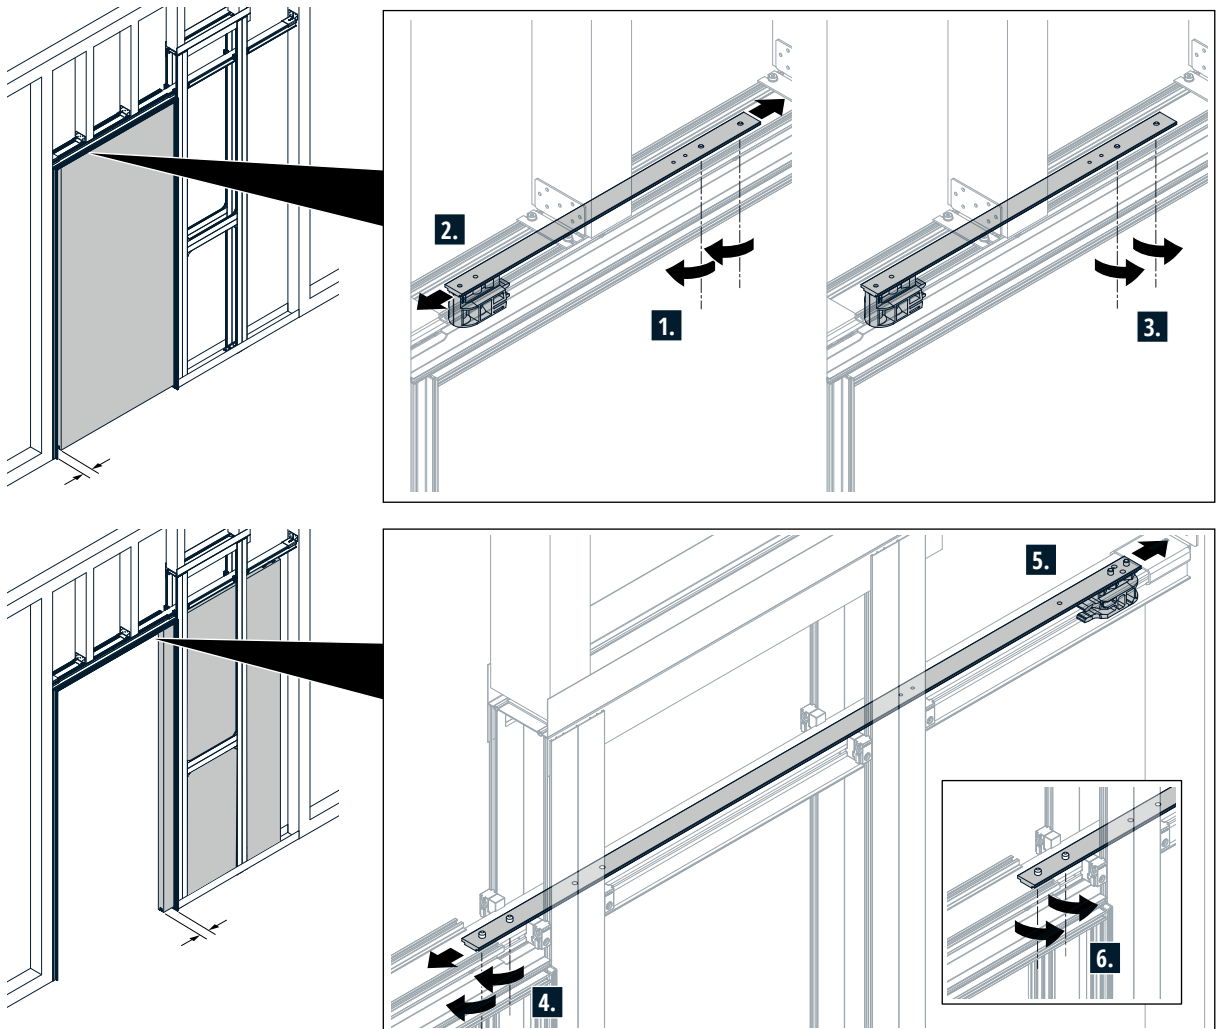



WINGBURG



954-869-4004



shop@wingburg.com



www.wingburg.com